



GENIO ^S
PLUS



USER MANUAL





TABLE OF CONTENTS

1. SAFETY PRECAUTIONS.....	4
2. MACHINE OVERVIEW.....	6
3. KEY FEATURES.....	7
3.1 INTUITIVE LED CONTROL RING	7
3.2 HOW TO START THE MACHINE	7
3.3 ESPRESSO BOOST	8
3.4 TEMPERATURE SELECTION	9
3.5 COLD MODE	10
4. BEVERAGE EXAMPLES.....	11
5. RECOMMENDATIONS FOR SAFE USE.....	12
6. FIRST USE RINSING.....	13
7. PREPARING A BEVERAGE.....	14
7.1 ONE CAPSULE (E. G. LUNGO)	14
7.2 TWO CAPSULES (E. G. CAPPUCCINO)	15
8. CLEANING.....	17
9. DESCALING AT LEAST EVERY 3-4 MONTHS.....	18
10. TROUBLESHOOTING.....	20
10.1 ORANGE DESCALING INDICATOR LIGHT TURNS ON	20



10.2 NO LIQUID COMES OUT - NO WATER?	20
10.3 NO LIQUID COMES OUT - CAPSULE BLOCKED?	21
10.4 NO LIQUID COMES OUT - INJECTOR BLOCKED?	21
10.5 VARIOUS	22

1. SAFETY PRECAUTIONS

Read all instructions and keep these safety instructions. Any type of misuse of the appliance may result in a potential injury.

In case of any inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee may not apply.

The guarantee does not cover appliances that do not work or do not work properly because they have not been maintained and/or descaled.

INTENDED USE

1. This appliance is intended to be used in household only. It is not intended to be used in following applications, and the guarantee will not apply for:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
2. Your appliance is intended for domestic use inside the home only at an altitude below 3400 m.

ELECTRICAL POWER SUPPLY

3. Connect the appliance to a mains power socket with an earth connection only. Mains voltage must be the same as the details on the rating plate. The use of incorrect connection will negate the guarantee and may be hazardous.
4. To protect against fire, electric shock and injury to persons do not immerse the power cord, plugs or the appliance in water or other liquid. Avoid spillage on the plug. Never touch the power cord with wet hands. Do not overfill the water tank.
5. In case of an emergency remove the plug from the mains power socket immediately.
6. Unplug from the mains power socket when not in use.
7. To disconnect, remove the plug from the mains power socket. Do not unplug by pulling the cord.
8. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces or sharp edges. Do not allow the cord to dangle (risk of tripping up). Never touch the cord with wet hands.
9. Do not operate any appliance with a damaged cord or plug. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not operate any appliance that malfunctions or has been damaged in any manner. Unplug cord immediately. Return the damaged appliance to the nearest authorised service facility designated by the NESCAFÉ® Dolce Gusto® hotline.
10. If the mains power socket does not match the plug on the appliance, have the plug replaced with a suitable type by aftersales service centres designated by the NESCAFÉ® Dolce Gusto® hotline.

CONDITIONS OF USE

11. Always use the appliance on a flat, stable, heat resistant surface away from sources of heat or water splashes.
12. Do not use the appliance without the drip tray and drip grid, except when a very tall mug is used. Do not use the appliance for hot water preparation.
13. Never turn the machine upside down.
14. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
15. Do not place on or near a hot gas or electric burner, or in a heated oven.
16. Do not put fingers under the outlet during beverage preparation.
17. Do not touch the injector of the machine head.
18. Never carry the appliance by the extraction head.
19. The capsule holder is equipped with a permanent magnet. Avoid placing the capsule holder near appliances and objects that can be damaged by magnetism, e.g. credit cards, USB drives and other data devices, video tapes, television and computer monitors with picture tubes, mechanical clocks, hearing aids and loud speakers.
20. Do not turn off the appliance during the descaling process. Rinse the water tank and clean the appliance to avoid any residual descaling agent.
21. If away for prolonged periods, on holiday, etc. the appliance must be emptied, cleaned and unplugged. Rinse before reuse. Operate the rinse cycle before re-using your appliance.
22. We recommend using the NESCAFÉ® Dolce Gusto® capsules designed and tested for the NESCAFÉ® Dolce Gusto® machine. They were designed to interact together – the interaction provides the in-cup quality that NESCAFÉ® Dolce Gusto® is known for. Each capsule is designed to prepare a perfect cup, and cannot be reused.
23. Do not remove hot capsules by hand. Always use capsule holder handle to dispose of used capsules.
24. Always insert the capsule holder in the machine to prepare a beverage. The appliance will not work if the capsule holder is not inserted. Do not pull out the capsule holder before the indicator stops blinking.
25. Machines equipped with a locking handle: Scalding may occur if the locking handle is opened during the brewing cycles. Do not pull up the locking handle before the lights on the machine stop flashing.
26. For health reasons, always fill the water tank with fresh drinking water.
27. After use of the appliance always remove the capsule and clean the capsule holder. Empty and clean the drip tray and capsule bin daily. Food allergy sufferers must rinse the appliance according to cleaning procedure.

28. The heating element surface is subject to residual heat after use and plastic housings may feel warm to touch several minutes upon use.
29. Patients with pacemakers or defibrillators: Do not hold the capsule holder directly over the pacemaker or defibrillator.
30. The appliance shall not be placed in a cabinet when in use.

CHILDREN

31. Keep the appliance and its cord out of reach of children aged less than 8 years. Children shall not play with the appliance.
32. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
33. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Persons who have a limited or no understanding of the operation and use of this appliance must first read and fully understand the contents of the user manual, and where appropriate seek additional guidance on its operation and use from the person responsible for their safety.
34. Children should be supervised to ensure that they do not play with the appliance.
35. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised by an adult.
36. Children should not use the appliance as a toy.

MAINTENANCE

37. Unplug from the mains power socket before cleaning. Allow to cool before putting on or taking off parts, before cleaning the appliance. Never clean wet or immerse appliance in any fluid. Never clean the appliance with running water. Never use detergents to clean the appliance. Clean the appliance only using soft sponges/brushes. The water tank should be cleaned with a clean food-safe brush.
38. Any operation, cleaning and care other than normal use must be undertaken by after-sales service centres designated by the NESCAFÉ® Dolce Gusto® hotline. Do not dismantle appliance and do not put anything into openings.
39. To reduce the risk of fire or electric shock, do not remove the cover. No user serviceable parts inside. Repair should be done by authorized service personnel only!
40. For additional guidance on how to use the appliance, refer to the user manual on www.dolce-gusto.com or call the NESCAFÉ® Dolce Gusto® hotline number.

RECYCLING

41. Packaging is made of recyclable materials. Contact your local council / authority for further information on recycling programs. Your appliance contains valuable materials which can be recovered or recycled.

EUROPEAN MARKETS ONLY: Think of the environment!



Your appliance contains valuable materials which can be recovered or recycled.

Leave it at a local civic waste collection point or at an approved service centre, where it will be disposed of properly. European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), stipulates that used household appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately to optimise the sorting and recycling of their parts and to reduce the impact on human health and the environment.

2. MACHINE OVERVIEW



1. Water tank
2. Water tank cover
3. INTUITIVE LED CONTROL RING
4. Locking handle
5. Rinsing tool
6. Capsule holder
7. Cleaning needle
8. Injector
9. Drip tray

ECONOMY MODE:


After 1 minute of non-usage upon an extraction.
5 minutes upon switch-on if no extraction.
Please be aware that the appliance is still using electricity whilst in eco-mode (0.45 Wh).

TECHNICAL DATA

-  GB / IE
220–240 V, 50/60 Hz, 1340–1600 W
-  max. 15 bar
-  0.8 L
-  ~2 kg
-  5–45 °C
41–113 °F
-  A = 11.21 cm
B = 27.32 cm
C = 28.81 cm

3. KEY FEATURES

3.1 INTUITIVE LED CONTROL RING

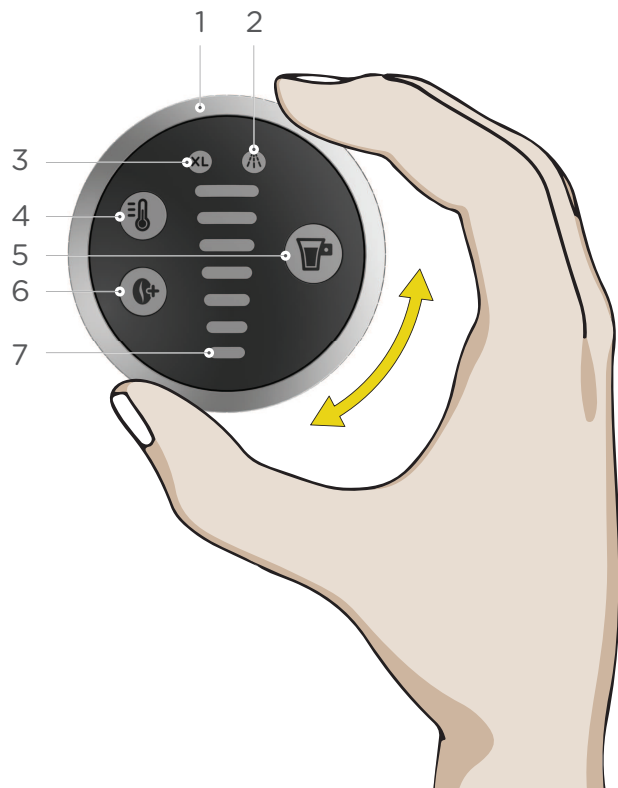

1. **Control ring**
Select the volume for the beverage preparation
2. **Descaling indicator**
The machine needs to be descaled after 300 extractions
3. **XL function**
Prepare an extra large cup
4. **TEMPERATURE SELECTION**
The beverage temperature can be set (4 predefined settings):



Cold




Low



Mid




High

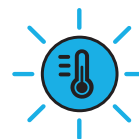


Cold, but the water temperature is still too high

5. **Start/Stop button**
Start/Stop the beverage preparation
6. **ESPRESSO BOOST**
Boost the taste intensity of your Espressos
7. **Volume display**
Shows the extraction progress by moving down from the selected volume until completion

3.2 HOW TO START THE MACHINE

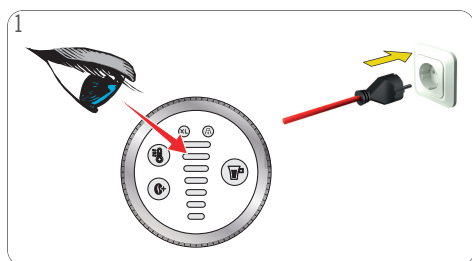

1
Ensure to use the correct mains voltage as given in 2. "MACHINE OVERVIEW" on page 6. Connect the power plug to the mains power socket.

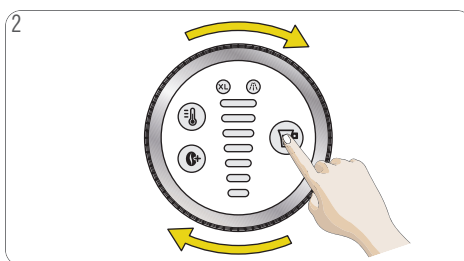

2
Press any button or rotate the control ring to start the machine.



3
The machine can also be switched on by opening the locking handle.



3. KEY FEATURES

3.3 ESPRESSO BOOST



Boost the taste intensity of your Espressos.




ESPRESSO BOOST



ESPRESSO BOOST cannot be selected in cold mode. Do not use ESPRESSO BOOST with milk, chocolate and tea capsules.



1 Check the number of bars shown on the capsule. Prepare ESPRESSO BOOST for capsules identified with level 1, 2 & 3 only.

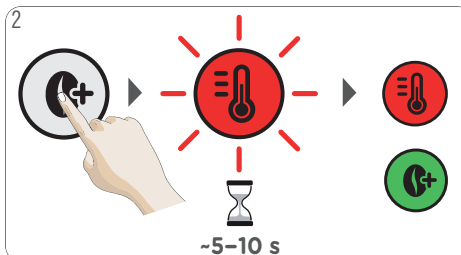


2 Press the ESPRESSO BOOST button to switch to ESPRESSO BOOST. The temperature selection button blinks while the machine is heating up for approximately 5–10 seconds. Afterwards, the temperature selection button lights steady red. The machine is ready to be used.



3 Use the control ring to set the volume in accordance with the number of bars shown on the capsule or select the desired volume to your own taste (max level 3).



4 Press the start/stop button. The beverage preparation starts. **Do not open the locking handle during the extraction.**

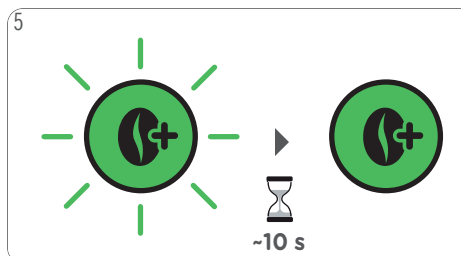

5 Pre-wetting: The preparation pauses and the ESPRESSO BOOST button starts blinking. After approx. 10 seconds the preparation continues and the ESPRESSO BOOST button is steady green. Wait until the machine stops automatically. The extraction can be stopped at any time manually by pressing the start/stop button.



ESPRESSO BOOST

Enjoy your beverage!

3. KEY FEATURES


3.4 TEMPERATURE SELECTION



Customise the temperature of your coffees to your personal taste. The machine provides you with four predefined settings: cold, low, medium and high.



Check the number of bars shown on the capsule.

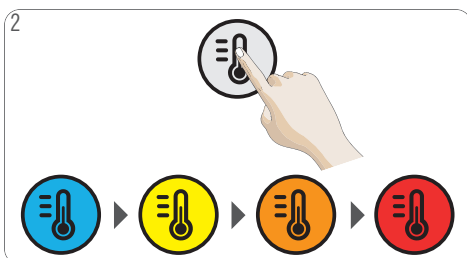

Press the temperature selection button to choose the desired temperature of your beverage.



Use the control ring to set the volume in accordance with the number of bars shown on the capsule or select the desired volume to your own taste.



Press the start/stop button. The beverage preparation starts. **Do not open the locking handle during the extraction.** Wait until the extraction stops. The machine stops the preparation automatically. The extraction can be stopped at any time manually by pressing the start/stop button.




After finishing the preparation, the temperature selection button and the volume display light blink for up to 8 seconds. **During that time do not open the locking handle!**




Enjoy your beverage!

3. KEY FEATURES

3.5 COLD MODE

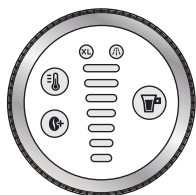


Option A: The machine is switched off.

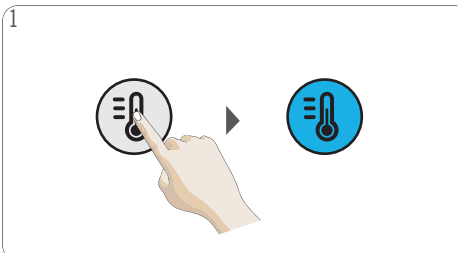

Press the temperature selection button to start the machine in cold mode. A cold beverage can be prepared immediately.


⚠ The cold mode must only be used with dedicated cold products, e. g. Cappuccino Ice.

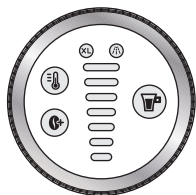


Option B: The machine is switched off.




Open the locking handle. The machine switches on automatically. Press the temperature selection button within 10 seconds after starting the machine to change to cold mode (blue). A cold beverage can be prepared immediately.

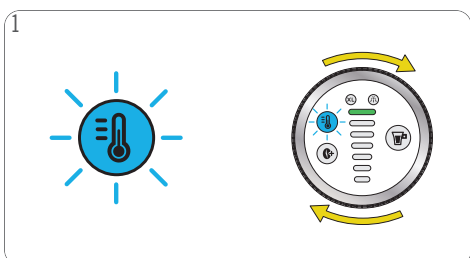

Option C: A hot beverage has been prepared or the cold mode was not selected within 10 seconds after starting the machine. Press the temperature selection button to go into cold mode. The temperature selection button will blink blue to indicate that the machine needs to cool down.

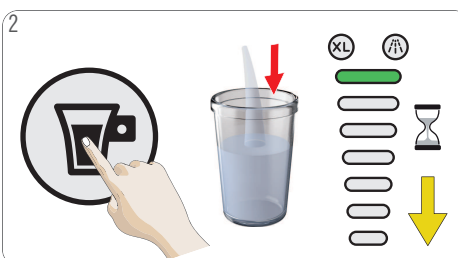

To accelerate the cooling, select level 7 on the volume display. Press the start/stop button. Machine starts rinsing. The volume display bar moves down until it disappears.

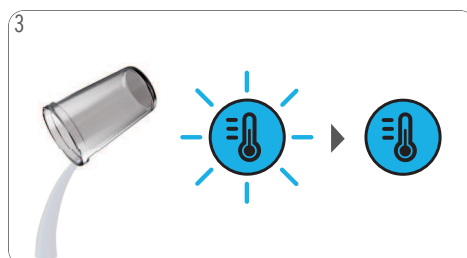


Empty the container. The temperature selection button is steady blue to indicate that the machine is cooled down and a cold beverage can be prepared.


4. BEVERAGE EXAMPLES



Adjust the drip tray

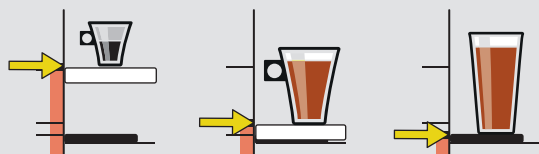

Choose hot or cold

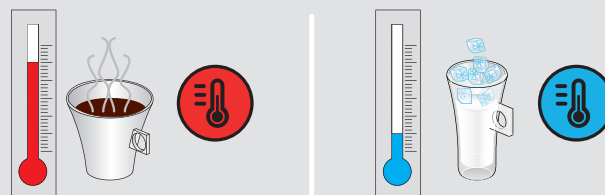





ESPRESSO



GRANDE/AMERICANO
MORNING CUP

CAPPUCCINO

CAPPUCCINO ICE

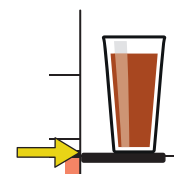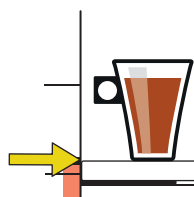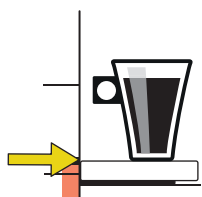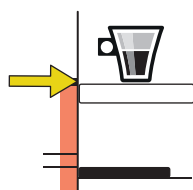

35 ml
Ristretto


50 ml
Espresso
Espresso Intenso

300 ml


① 200 ml + ② 40 ml = 240 ml

① 30 g + 125 ml + ② 85 ml = 240 ml

5. RECOMMENDATIONS FOR SAFE USE

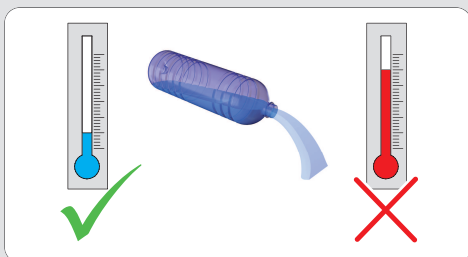

- ⚠ Never add hot water to the water tank!
- ⚠ For rinsing and beverage preparation use only drinking water.

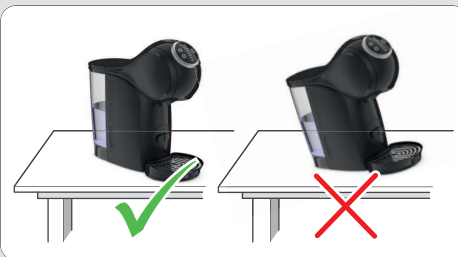

- ⚠ Always keep the machine upright!




- ⚠ After finishing the preparation, the temperature selection button and the volume display light blink for up to 8 seconds. **During that time do not open the locking handle!** After that, the temperature selection button lights steadily.



- ⚠ Do not touch the plug with wet hands. Do not touch the machine with wet hands!



- ⚠ Never use a wet sponge. Only use a soft damp cloth to clean the top of the machine.

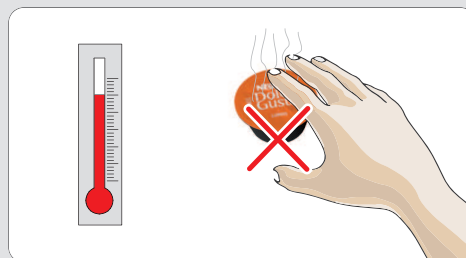

- ⚠ Do not touch the used capsule after the beverage preparation! Hot surface, risk of burns!



- ⚠ Never touch the injector with the finger!



- ⚠ Do not use the rinsing tool for tea or hot water preparation.



- ⚠ IF LEFT UNUSED FOR MORE THAN 2 DAYS: Empty the water tank, rinse it, refill it with fresh drinking water and insert it into the machine. Before reuse rinse machine according to instructions in 8. "CLEANING" on page 17, beginning with step 4 to step 8.

6. FIRST USE RINSING




1 Fill the water tank with fresh drinking water. Insert it back into the machine. Remove the drip tray.




2 Open the locking handle. Put the rinsing tool into the capsule holder. Insert the capsule holder into the machine. Place a large empty container underneath the coffee outlet.




3 Close the locking handle.

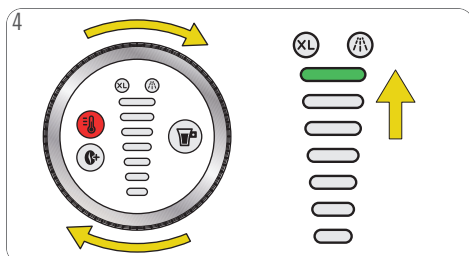


4 Use the control ring and select level 7 on the volume display (highest bar).

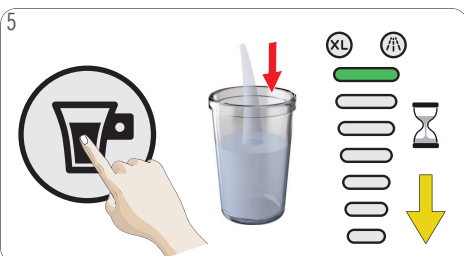

5 Press the start/stop button. Machine starts rinsing.

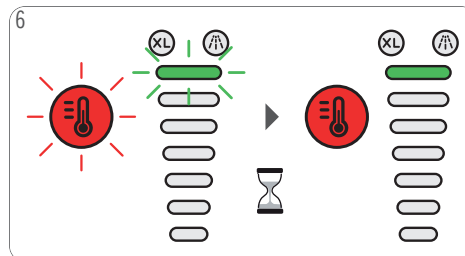


6 The temperature selection button and the volume display light blink for up to 8 seconds.

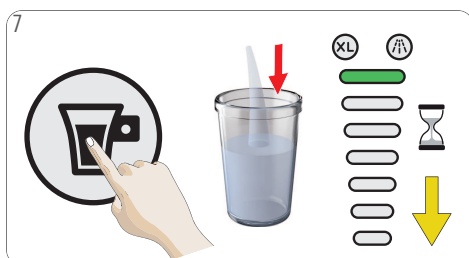

7 Press the start/stop button. Machine starts rinsing. Wait until the machine stops automatically. The temperature selection button and the volume display light blink for up to 8 seconds.



8 Open the locking handle. Pull out the capsule holder. Remove the rinsing tool. Reinsert the capsule holder.

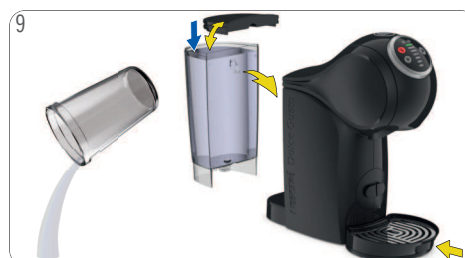

9 Empty the container. Fill the water tank with fresh drinking water. Insert the water tank into the machine. Reinsert the drip tray. The machine is ready to be used.



7. PREPARING A BEVERAGE

7.1 ONE CAPSULE (E. G. LUNGO)



Adjust the drip tray position. Place the cup with the correct cup size on the drip tray. See "BEVERAGE EXAMPLES" or package. Check if the water tank contains enough fresh drinking water.




Open the locking handle. The machine switches on automatically. The temperature selection button blinks while the machine is heating up for approximately 40 seconds. Afterwards, the temperature selection button lights steady red. The machine is ready to be used.



Make sure the rinsing tool is not inside. Insert the capsule in the capsule holder. Insert it back into the machine. Close the locking handle.



Use the control ring to set the volume in accordance with the number of bars shown on the capsule or select the desired volume to your own taste. Choose XL beverage for an extra big cup. Wait around 1.5 min if you want to prepare a second extra big cup.

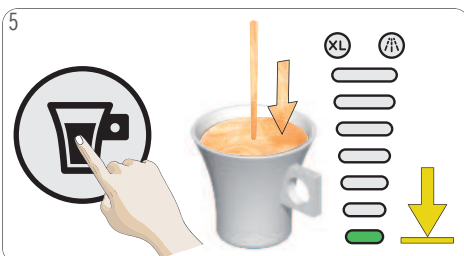

Press the start/stop button. The beverage preparation starts. **Do not open the locking handle during the extraction.** Wait until the extraction stops. The machine stops the preparation automatically. The extraction can be stopped at any time manually by pressing the start/stop button.



After finishing the preparation, the temperature selection button and the volume display light blink for up to 8 seconds. **During that time do not open the locking handle!**



After the extraction is finished open the locking handle. Remove the cup from the drip tray.



Pull out the capsule holder. Remove the used capsule. Put the used capsule in the dustbin.



Rinse both sides of the capsule holder with fresh drinking water. Dry the capsule holder. Insert it back into the machine. Enjoy your beverage!

7. PREPARING A BEVERAGE

7.2 TWO CAPSULES (E. G. CAPPUCCINO)




Adjust the drip tray position. Place the cup with the correct cup size on the drip tray. See "BEVERAGE EXAMPLES" or package. Check if the water tank contains enough fresh drinking water.




Open the locking handle. The machine switches on automatically. The temperature selection button blinks for approximately 40 seconds. Afterwards, the temperature selection button lights steady red. The machine is ready to be used.



Make sure the rinsing tool is not inside. Insert the first capsule in the capsule holder. Insert it back into the machine. Close the locking handle.

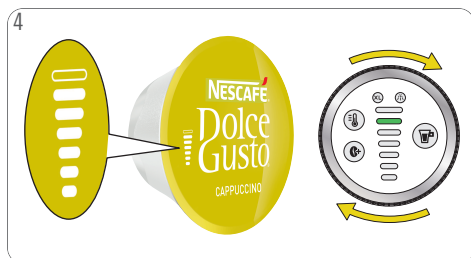

Use the control ring to set the volume in accordance with the number of bars shown on the capsule or select the desired volume to your own taste. Choose XL beverage for an extra big cup. Wait around 1.5 min if you want to prepare a second extra big cup.

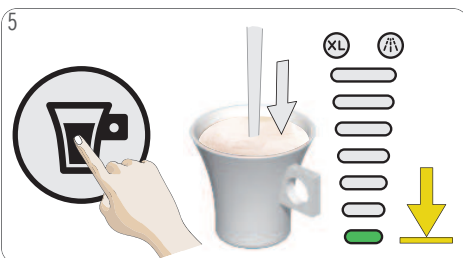

Press the start/stop button. The beverage preparation starts. **Do not open the locking handle during the extraction.** Wait until the extraction stops. The machine stops the preparation automatically. The extraction can be stopped at any time manually by pressing the start/stop button.



After finishing the preparation, the temperature selection button and the volume display light blink for up to 8 seconds. **During that time do not open the locking handle!**



Open the locking handle. Pull out the capsule holder. Remove the used capsule. Put the used capsule in the dustbin.



Insert the second capsule in the capsule holder. Insert it back into the machine. Close the locking handle.




Use the control ring to set the volume in accordance with the number of bars shown on the capsule or select the desired volume to your own taste.



7. PREPARING A BEVERAGE

7.2 TWO CAPSULES (E. G. CAPPUCCINO)

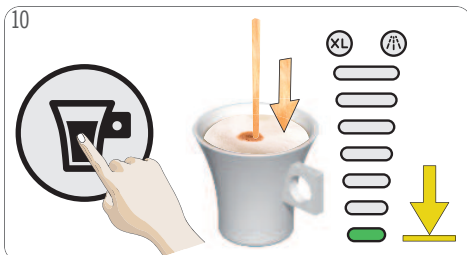

Press the start/stop button. The beverage preparation starts. **Do not open the locking handle during the extraction.** Wait until the extraction stops. The machine stops the preparation automatically. The extraction can be stopped at any time manually by pressing the start/stop button.



After finishing the preparation, the temperature selection button and the volume display light blink for up to 8 seconds. **During that time do not open the locking handle!**



When the indicator light is steady green open the locking handle. Remove the cup from the drip tray.




Pull out the capsule holder. Remove the used capsule. Put the used capsule in the dustbin.



Rinse both sides of the capsule holder with fresh drinking water. Dry the capsule holder. Insert it back into the machine. Enjoy your beverage!

8. CLEANING

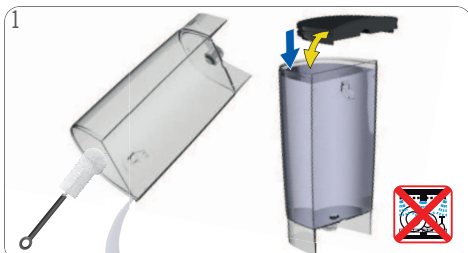

Rinse and clean the water tank. Use a clean food-safe brush and washing-up liquid as needed. Afterwards refill with fresh drinking water and insert it into the machine. The water tank is not dishwasher proof!




Rinse the drip tray and the rinsing tool with fresh drinking water. Clean the drip tray with a clean food-safe brush. The drip tray is not dishwasher proof!



Clean both sides of the capsule holder with washing-up liquid and fresh drinking water. Alternatively wash in the dishwasher. Dry it afterwards. Clean the head of the machine around the injector with a clean soft damp cloth.



Open the locking handle. Put the rinsing tool into the capsule holder. Insert the capsule holder into the machine. Close the locking handle. Remove the drip tray. Place a large empty container underneath the coffee outlet.

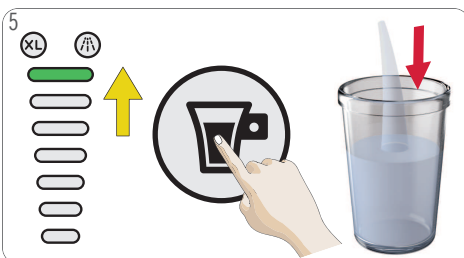


Use the control ring and select level 7 on the volume display (highest bar). Press the start/stop button. Machine starts rinsing.



Empty and clean the container. **Warning: Hot water! Handle with care!**



Open the locking handle. Pull out the capsule holder. Remove the rinsing tool. Keep it in a safe place for later cleaning or descaling. If any, remove the water from the water tank.

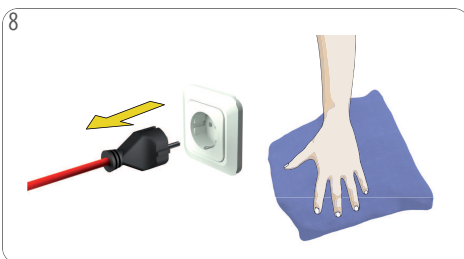

Switch off the machine. Unplug the power plug! Clean the machine with a soft damp cloth. Dry it afterwards with a soft dry cloth.



9. DESCALING AT LEAST EVERY 3–4 MONTHS



www.dolce-gusto.com

Use NESCAFÉ® Dolce Gusto® liquid descaler. To order, call the NESCAFÉ® Dolce Gusto® hotline or go on the NESCAFÉ® Dolce Gusto® website.



Do not use vinegar for descaling!



Avoid contact of the descaling liquid with any part of the machine.



Do not unplug the machine during descaling!




If the orange descaling indicator light turns on, or the beverage comes out slower than usual (even in droplets), or if it is cooler than usual, the machine has to be descaled.




If any, remove the water from the water tank. Mix 0.5 liter of fresh drinking water with the descaler in a measuring cup. Pour the descaling solution into the water tank and insert the water tank into the machine.




Open the locking handle. Put the rinsing tool into the capsule holder. Insert the capsule holder into the machine. Close the locking handle. Place a large empty container underneath the coffee outlet.

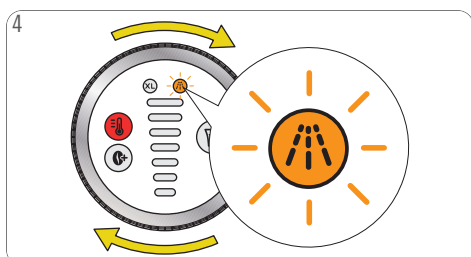

To enter the descaling mode, select XL and turn the control ring four times clockwise until the descaling LED starts blinking.

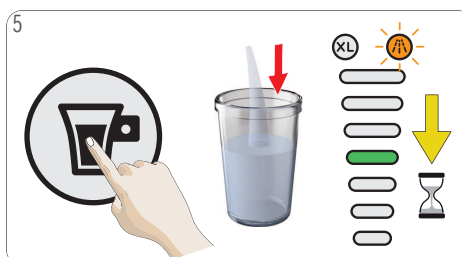


Press the start/stop button. The machine starts descaling. The volume display bar moves from the top down to the 4th level. The machine descales with hot water in start-stop operation. The machine stops descaling once the water tank is empty.

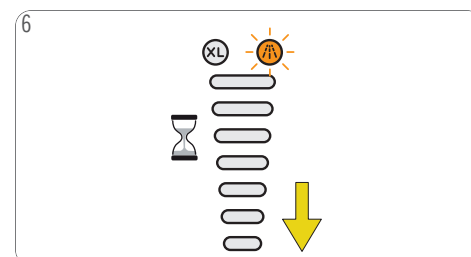

To allow a better descaling efficiency, the machine is on hold approximately 2 minutes. The volume display bar moves down until it disappears.


9. DESCALING AT LEAST EVERY 3–4 MONTHS

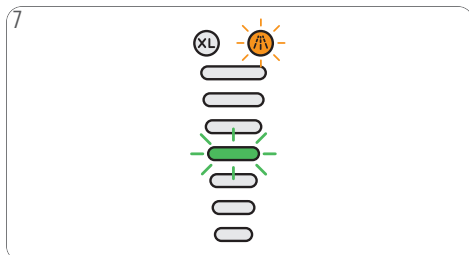


The volume display bar flashes (4th level).



Empty and clean the container. Rinse and clean the water tank. Use a clean food-safe brush and washing-up liquid as needed. Refill the water tank with fresh drinking water and insert it into the machine. Place the container underneath the beverage outlet.

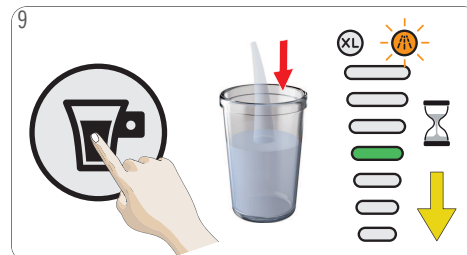

Press the start/stop button. The machine rinses continuously with hot water. The volume display bar moves down until it disappears. The machine stops rinsing once the water tank is empty.

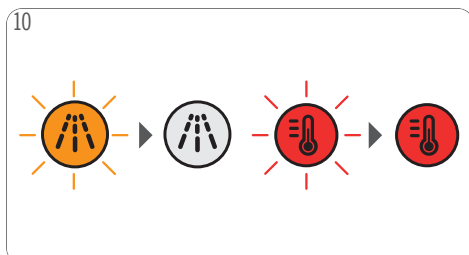

The descaling indicator turns off, the temperature selection blinks and turns steady red once the machine is ready to use.



Remove the container. Empty and clean the container. Pull out the capsule holder. Remove the rinsing tool. Keep it in a safe place for later cleaning or descaling. Rinse both sides of the capsule holder with fresh drinking water. Reinsert the capsule holder.



Clean the machine with a soft damp cloth. Dry it afterwards with a soft dry cloth.



10. TROUBLESHOOTING

10.1 ORANGE DESCALING INDICATOR LIGHT TURNS ON




The orange descaling indicator light turns on.

1



This means that the machine needs to be descaled. To do so, please follow the descaling instructions. See 9. "DESCALING AT LEAST EVERY 3–4 MONTHS" on page 18.

10.2 NO LIQUID COMES OUT – NO WATER?

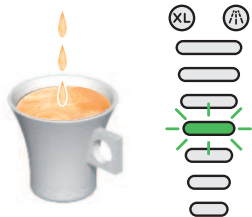

The beverage preparation stops part way during the delivery or does not start at all. The volume display flashes at the current level. No liquid comes out: The water tank may be empty.

1




Check if the water tank contains enough fresh drinking water. If not, refill with fresh drinking water and press the start/stop button to continue the preparation. In case there is still no liquid coming out check 10.3 "NO LIQUID COMES OUT – CAPSULE BLOCKED?".

10. TROUBLESHOOTING

10.3 NO LIQUID COMES OUT – CAPSULE BLOCKED?



No liquid comes out: The capsule may be blocked and under pressure.

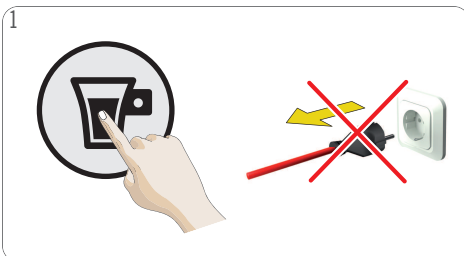

Always keep the machine upright! To stop the preparation, press the start/stop button again. Do not unplug the machine!



Do not drink the coffee! Open the locking handle. The machine releases pressure. Remove the capsule holder. Put the used capsule in the dustbin.



Try to operate the machine without capsule. If the water flows, it shows that the issue was with the capsule. Just use a different capsule. If not, follow with 10.4 "NO LIQUID COMES OUT - INJECTOR BLOCKED?".


10.4 NO LIQUID COMES OUT – INJECTOR BLOCKED?



No liquid comes out: The injector may be blocked and under pressure.



Ensure the drip tray is empty. Take out the cleaning needle. **Keep the needle out of reach of children!**

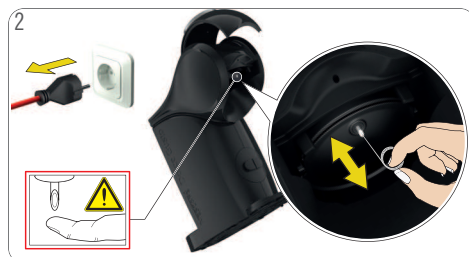

Remove the capsule holder. Open the locking handle. Clean the injector with the cleaning needle. Follow instructions in 9. "DESCALING AT LEAST EVERY 3–4 MONTHS" on page 18.



10. TROUBLESHOOTING


10.5 VARIOUS



The machine cannot be switched on.




Check if the power plug is correctly plugged into a mains power socket. If yes, check your electricity supply.

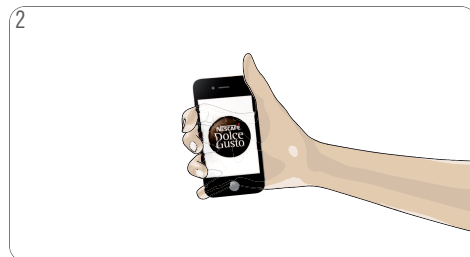

If the machine still cannot be switched on, call the NESCAFÉ® Dolce Gusto® hotline. For the hotline numbers see "Machine Hotlines".




The beverage is splashing out of the coffee outlet.

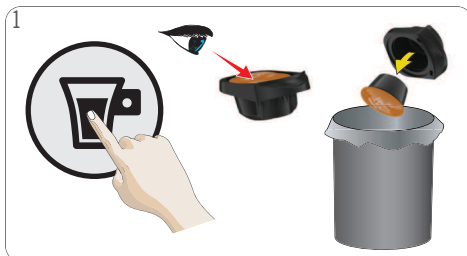

Press the start/stop button to stop the preparation. Pull out the capsule holder. Put the used capsule in the dustbin.



Clean the capsule holder. Insert a new capsule in the capsule holder and insert it back into machine.

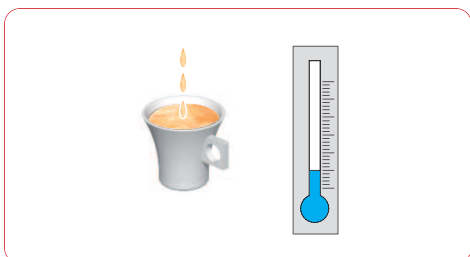


If the beverage comes out slower than usual (even in droplets), or if it is cooler than usual the machine has to be descaled.




To do so, please follow the descaling instructions. See 9. "DESCALING AT LEAST EVERY 3–4 MONTHS" on page 18.

10. TROUBLESHOOTING


10.5 VARIOUS

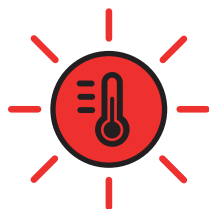

The temperature selection button blinks fast.

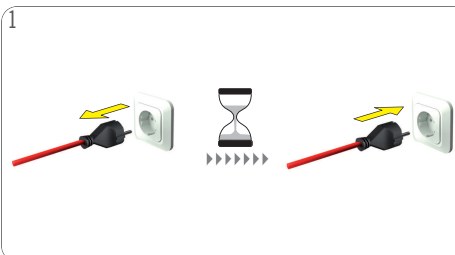


Check if capsule is blocked, see 10.3. "NO LIQUID COMES OUT – CAPSULE BLOCKED?" on page 21. Unplug the power plug and wait 20 minutes. Afterwards, insert the power plug into the mains power socket and switch the machine on.

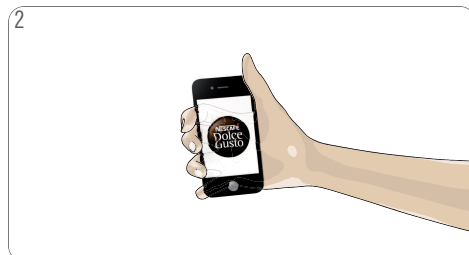


If the temperature selection button still flashes fast call the NESCAFÉ® Dolce Gusto® hotline. For the hotline numbers see last page.



Water accumulates underneath or around the machine. Clear water leaks around the capsule holder during the beverage preparation.

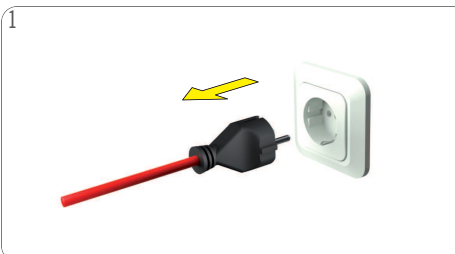

Unplug the power plug!

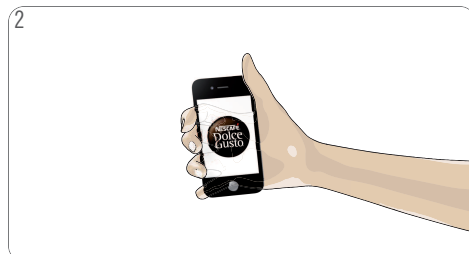

Call the NESCAFÉ® Dolce Gusto® hotline or go on the NESCAFÉ® Dolce Gusto® website. For the hotline numbers see last page.



Water is splashing out of the coffee outlet during rinsing or descaling.



Put the rinsing tool into the capsule holder. Insert the capsule holder into the machine.



الخطوط المباشرة

AR 0800 999 81 00
BR 0800 7762233
CA 1 888 809 9267
CH 0800 86 00 85
CL 800 213 006
CO 01800-05-15566
CR 0-800-542-5444
DO (809) 508-5100
EC 1800 637-853 (1800 NESTLE)
GT 1-800-299-0019
HN 800-2220-6666
MX 800 365 2348
NI 1-800-4000
PA 800-0000
PE 080010210
PY 0800-112121
TT (868) 663-6832
US 1-800-745-3391
UY 0800-2122

AT 0800 365 23 48
BE 0800 93217
BG 0 700 10 330
CZ 800 135 135
DE 0800 365 23 48
DK 80 300 100
EE 6 177 441

ES 900 10 21 21
FI 0800 0 6161
FR 0 800 97 07 80
GB 0800 707 6066
GR 210 6371000
HR 0800 600 604
HU 06 40 214 200

IE 00800 6378 5385
IT 800365234
KZ 8-800-080-2880
LT 8 700 55 200
LU 8002 3183
LV 67508056
MA 080 100 52 54


MK 0800 00 200
MT 80074114
NL 0800-3652348
NO 800 80 730
PL 0800 174 902
PT 800 200 153
RO 0 800 8 637 853

SK 0800 135 135
SR 0800 000 100
SV 020-299200
TR 0800 211 02 18
4 44 31 60
UA 0 800 50 30 10

AL 0842 640 10
ZA 086 009 6116
+27 11 514 6116
AU 1800 466 975
NZ 0800 365 234


AE 800348786
BA 0800 202 42
CN 4006304868
HK (852) 21798999
ID 0800 182 1028
IL 1-700-50-20-54
JO +96265902997
JP 0120-879-816
KR 080-234-0070
KW +965 22286847
LB +9614548593
ME 020 269 902
Middle East: +97143634100
MY 1800 88 3633
PH 898-0061
PK 0800-62282
QA +97444587615
RU 8-800-700-79-79
SA 8008971971
SG 1 800 836 7009
SI 080 45 05
TH 1-800-295588
0-2657-8601
TW 0800-000-338
VN 1800 6699



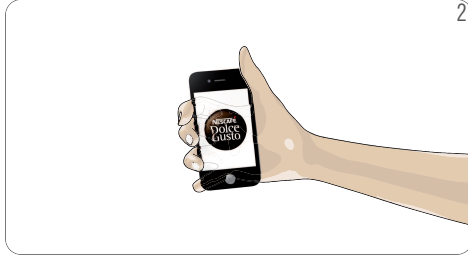


2

في حالة استمرار وميض زر اختيار درجة الحرارة، اتصل بالخط الساخن NESCAFÉ® Dolce Gusto® على الفور. اطلع على الصفحة الأخيرة للتعرف على أرقام الخطوط المباشرة.

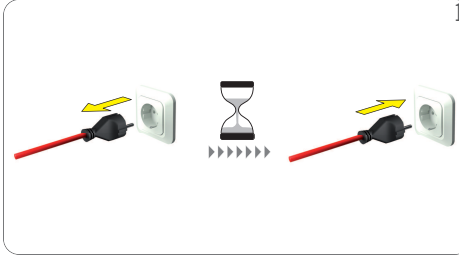


1

تحقق من انسداد الكبسولة، انظر 10.3. «في حالة عدم خروج أي سائل - هل يوجد انسداد في الكبسولة؟» الواردة في الصفحة 21. اسحب قابس الطاقة وانتظر 20 دقيقة. ثم وصل قابس الطاقة بمقبس التيار الرئيسي وشغل الماكينة.

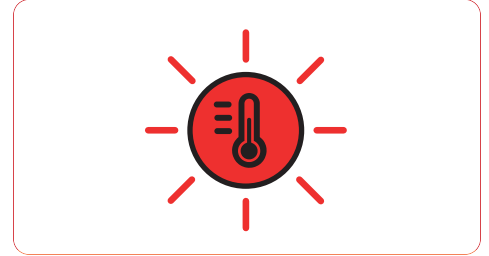


يومض زر اختيار درجة الحرارة بسرعة.

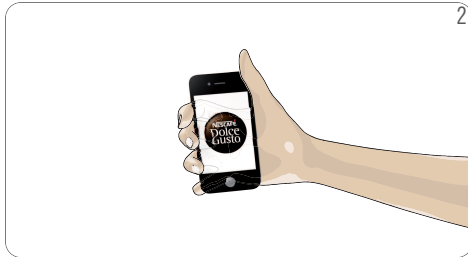

2

اتصل بالخط المباشر NESCAFÉ® Dolce Gusto® أو انتقل إلى الموقع الإلكتروني NESCAFÉ® Dolce Gusto®. اطلع على الصفحة الأخيرة للتعرف على أرقام الخطوط المباشرة.

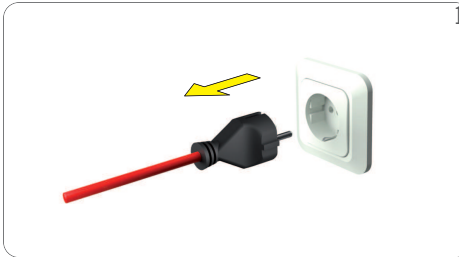

1

اسحب قابس الطاقة!



المياه تتراكم أسفل وحول الماكينة. تتسرب المياه النقية حول حامل الكبسولات خلال إعداد المشروب.



1


ضع أداة الغسل داخل حامل الكبسولات. ركب حامل الكبسولات بالماكينة.



المياه تتناثر من منفذ القهوة أثناء الغسل أو إزالة الترسبات.

10. استكشاف الأخطاء وإصلاحها

10.5 متنوع

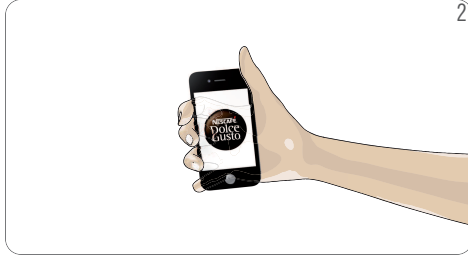

إذا لم تتمكن بعد من تشغيل الماكينة، اتصل بالخط المباشر لشركة NESCAFÉ® Dolce Gusto®. اطلع على الصفحة الأخيرة للتعرف على أرقام الخطوط المباشرة.



تأكد من صحة توصيل القابس بمقبس التيار الكهربائي. إن كان موصلًا بشكل صحيح، تحقق من مصدر الإمداد بالتيار الكهربائي.



يتعذر تشغيل الماكينة.



نظف حامل الكبسولات. أدخل كبسولة جديدة في حامل الكبسولات ثم أدخله في الجهاز مرة أخرى.




المس زر البدء/التوقف لإيقاف التحضير. اسحب حامل الكبسولات. ضع الكبسولة المستعملة في صندوق القمامة.



المشروب يتناثر من منفذ القهوة.



لفعل ذلك، يرجى اتباع تعليمات إزالة الرواسب. انظر في 9. «إزالة الترسبات كل 3-4 أشهر على الأقل» الواردة في الصفحة 18.

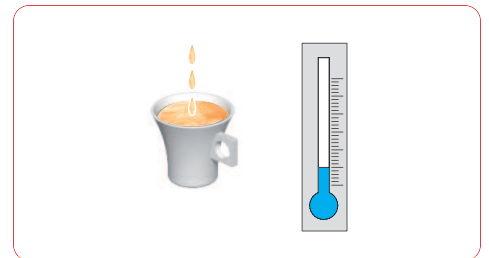


في حالة خروج المشروب بسرعة أقل من المعتاد (حتى في حالة خروجه على هيئة قطرات)، أو إذا كان المشروب باردًا بدرجة أكبر من المعتاد، فإن ذلك يشير إلى ضرورة إزالة الترسبات من الماكينة.

10. استكشاف الأخطاء وإصلاحها

10.3 في حالة عدم خروج أي سائل - هل يوجد انسداد في الكبسولة؟



لا تشرب القهوة! افتح مقبض القفل. الماكينة تحرر الضغط. اسحب حامل الكبسولات. ضع الكبسولة المستعملة في صندوق القمامة.

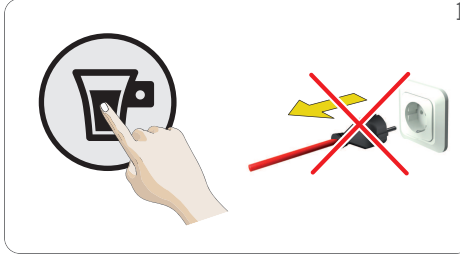

ضع الماكينة دائماً بشكل عمودي مستقيم! لإيقاف عملية التحضير، اضغط فوق زر البدء/التوقف مجدداً. لا تقم بسحب القابس!




في حالة عدم خروج أي سائل: قد تكون الكبسولة مسدودة أو تحت ضغط.



جرب تشغيل الماكينة بدون الكبسولة. إذا تنفخ الماء، فهذا يوضح وجود عطل بالكبسولة. ما عليك سوى أن تستخدم كبسولة مختلفة. إذا لم يكن كذلك، فاتباع الخطوة 10.4 «في حالة عدم خروج أي سائل - هل يوجد انسداد في الحاقن؟».


10.4 في حالة عدم خروج أي سائل - هل يوجد انسداد في الحاقن؟

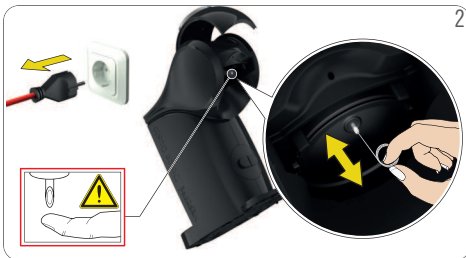

اسحب حامل الكبسولات. افتح مقبض القفل. نظف الحاقن بإبرة التنظيف. اتبع التعليمات الواردة في 9. «إزالة الترسبات كل 3-4 أشهر على الأقل» الواردة في الصفحة 18.



احرص على أن يكون درج التقطير فارغاً. أخرج إبرة التنظيف. احفظ الإبرة بعيداً عن متناول الأطفال!

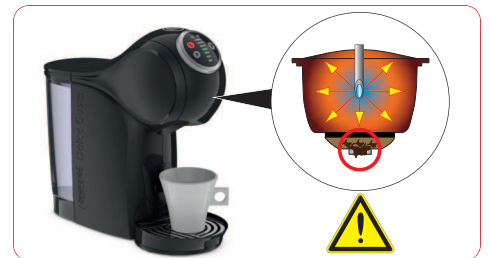

لا تخرج أي سائل: قد يكون الحاقن مسدوداً وتحت الضغط.

10. استكشاف الأخطاء وإصلاحها


10.1 تعمل إضاءة المؤشر البرتقالية لإزالة الترسبات



هذا يعني أن جهاز إعداد القهوة في حاجة إلى إزالة الترسبات. لفعل ذلك، يُرجى اتباع تعليمات إزالة الرواسب. انظر في 9. «إزالة الترسبات كل 3-4 أشهر على الأقل» الواردة في الصفحة 18.

تعمل إضاءة المؤشر البرتقالية لإزالة الترسبات.


10.2 في حالة عدم خروج أي سائل - هل لا توجد مياه؟

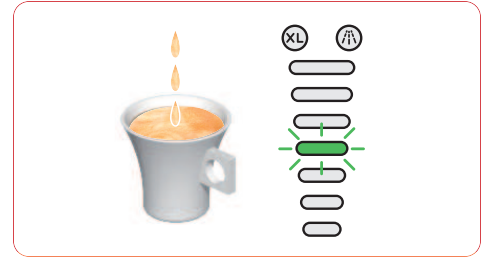

تحقق من وجود مياه شرب نقية كافية في خزان المياه. وإن لم يكن كذلك، فأعد التعبئة بماء شرب نقي والمس زر البدء/التوقف لاستمرار التحضير. إذا استمر عدم خروج أي سائل، راجع الخطوة 10.3 «عدم خروج أي سائل - هل يوجد انسداد في الكبسولة؟».

تتوقف عملية إعداد المشروب أو لا تبدأ على الإطلاق. تومض وحدة عرض المنسوب في المستوى الحالي. في حالة عدم خروج أي سائل: قد يكون خزان الماء فارغاً.


9. إزالة الترسبات كل 3-4 أشهر على الأقل

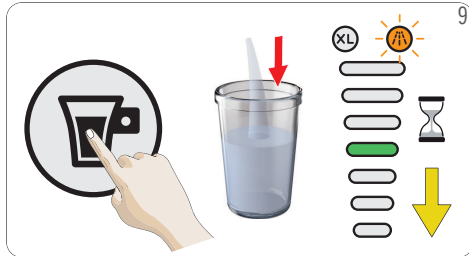

اصفط فوق زر البدء/التوقف. تُشطف الماكينة بالماء الساخن باستمرار. تنتقل وحدة عرض المنسوب الشرائطية للأسفل حتى يختفي. تتوقف ماكينة إعداد القهوة عن الشطف بمجرد فراغ خزان الماء.



قم بتفريغ الوعاء وتنظيفه. اغسل ونظف خزان المياه. استخدم فرشاة طعام نظيفة وأمنة وسائل تنظيف إذا تطلب الأمر. أعد ملء خزان الماء بمياه شرب عذبة ثم أدخله في الماكينة. ضع الوعاء تحت منفذ المشروب.

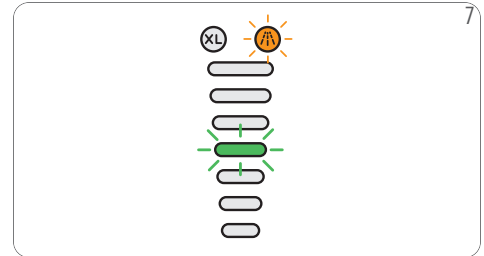


تومض وحدة عرض المنسوب الشرائطية (المستوى 4).



نظف الماكينة بقطعة قماش ناعمة رطبة. جفف بعد ذلك بقطعة قماش ناعمة جافة.



أخرج الوعاء. قم بتفريغ الوعاء وتنظيفه. اسحب حامل الكبسولات. أزل أداة الغسل. احفظها في مكان آمن للتنظيف وإزالة الرواسب في وقت لاحق. اشطف جانبي حامل الكبسولة معًا بمياه شرب عذبة. أعد إدخال حامل الكبسولات.

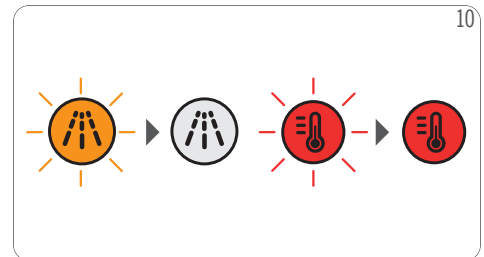

يتوقف مؤشر إزالة الترسبات، ويومض زر اختيار درجة الحرارة، وينتقل إلى الوميض باللون الأحمر بانتظام عندما تكون ماكينة إعداد القهوة جاهزة للاستخدام.

9. إزالة الترسبات كل 3-4 أشهر على الأقل



لا تفصل ماكينة إعداد القهوة عن الكهرباء في أثناء عملية إزالة الترسبات!



تجنب وصول مادة إزالة الترسبات إلى أي جزء من مكونات الماكينة.



لا تستعمل الخل لإزالة الترسبات!



www.dolce-gusto.com

استخدم مزيل الترسبات السائل من NESCAFÉ® Dolce Gusto® لطالب شراء مزيل الترسبات السائل، اتصل بالخط المباشر NESCAFÉ® Dolce Gusto® أو انتقل إلى الموقع الإلكتروني NESCAFÉ® Dolce Gusto®.




افتح مقبض القفل. ضع أداة الغسل داخل حامل الكبسولات. ركب حامل الكبسولات بالماكينة. أغلق مقبض القفل. ضع وعاء فارغًا كبيرًا أسفل منفذ القهوة.




أخرج الماء، في حالة وجوده، من خزان الماء. ضع كيسًا من مادة إزالة الترسبات في كأس المعايرة وأضف عليه 0.5 لتر من مياه الشرب النقية. صب مزيل الترسبات في خزان المياه وركبه بالماكينة.




إذا اشتغلت إضاءة مؤشر إزالة الترسبات البرتقالية، أو إذا خرج المشروب بدرجة أبطأ من المعتاد (حتى في حالة خروجه على هيئة قطرات)، أو إذا كان أبرد من المعتاد، فإن ذلك يشير إلى ضرورة إزالة الترسبات من الماكينة.

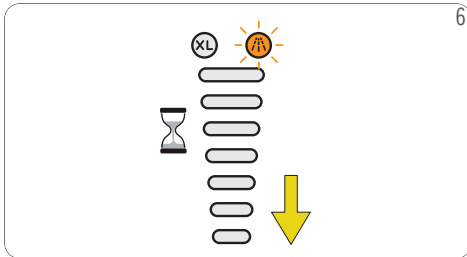

لإجراء عملية إزالة الترسبات بكفاءة، ضع ماكينة إعداد القهوة في وضع الانتظار لدقيقتين. تنتقل وحدة عرض المنسوب الشرائطية للأسفل حتى يختفي.

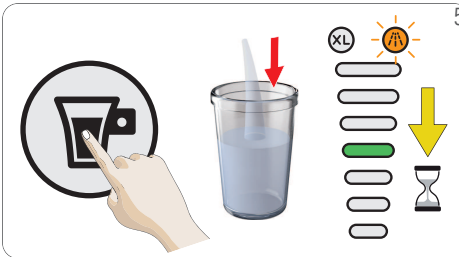

اضغط فوق زر البدء/التوقف. تبدأ الماكينة في إزالة الترسبات. يتحرك وحدة عرض المنسوب الشرائطية من الأعلى للأسفل إلى المستوى الرابع. تزيل الماكينة الترسبات بالماء الساخن بطريقة البدء والتوقف. تتوقف الماكينة عن إزالة الترسبات بمجرد فراغ خزان الماء.

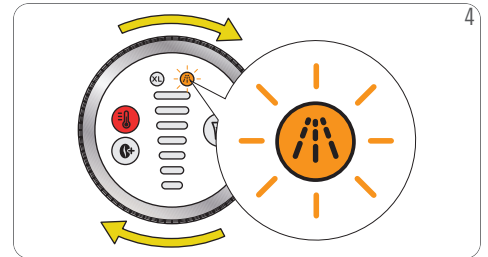


لتشغيل وضع إزالة الترسبات، اختر خاصية XL، ثم أدر حلقة التحكم أربع مرات في اتجاه عقارب الساعة حتى تبدأ وحدة العرض LED في الوميض.



نظف جانبي حامل الكبسولات باستخدام سائل تنظيف وماء شرب نقي. استخدم غسالة الأطباق كبديل. جفف حامل الكبسولات بعد ذلك. نظف رأس الماكينة حول الحاقن باستخدام قطعة قماش ناعمة ونظيفة.



اغسل درج التقطير وأداة الغسل بمياه شرب نقية. نظف درج التقطير بفرشاة طعام آمنة نظيفة. درج التقطير غير ملائم للتنظيف في غسالة الأطباق!

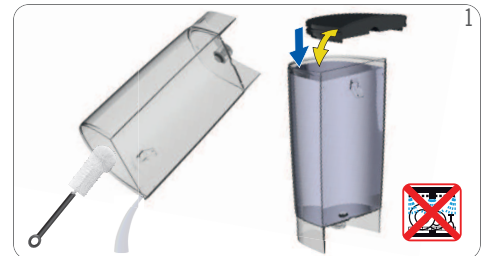

اغسل ونظف خزان المياه. استخدم فرشاة طعام نظيفة وآمنة وسائل تنظيف إذا تطلب الأمر. بعد ذلك، أعد ملء الخزان بمياه شرب نقية وسائل تنظيف في الماكينة. خزان المياه غير ملائم للتنظيف في غسالة الأطباق!




قم بتفريغ الوعاء وتنظيفه. تحذير: المياه ساخنة! تعامل بحذر!



استخدم حلقة التحكم، واختر المستوى 7 على وحدة عرض المنسوب (أعلى شريط). اضغط فوق زر البدء/التوقف. الماكينة تبدأ في الغسل.



افتح مقبض القفل. ضع أداة الغسل داخل حامل الكبسولات. ركب حامل الكبسولات بالماكينة. أغلق مقبض القفل. اسحب درج التقطير. ضع وعاءً كبيراً أسفل منفذ القهوة.

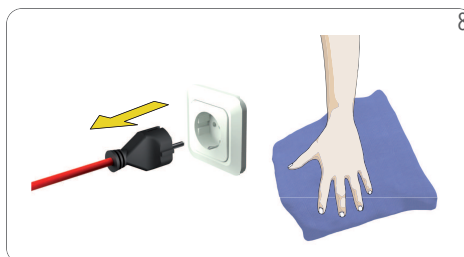

أطفئ الماكينة. اسحب قابس الطاقة! نظف الماكينة بقطعة قماش ناعمة رطبة. جفف بعد ذلك بقطعة قماش ناعمة جافة.



افتح مقبض القفل. اسحب حامل الكبسولات. أزل أداة الغسل. احفظها في مكان آمن للتنظيف وإزالة الرواسب في وقت لاحق. أخرج الماء، في حالة وجوده، من خزان الماء.


7. إعداد مشروب 7.2 كبسولتان (على سبيل المثال CAPPUCCINO)



عندما يضيء مصباح المؤشر باللون الأخضر بشكل ثابت، افتح مقبض القفل. أزل الكوب من درج التقطير.



بعد الانتهاء من التحضير، يومض زر اختيار درجة الحرارة وتومض وحدة عرض المنسوب لمدة تصل إلى 8 ثوان. لا تفتح مقبض القفل خلال هذه الفترة!

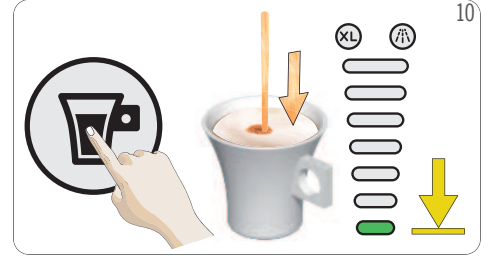

اضغط فوق زر البدء/التوقف. تبدأ عملية إعداد المشروب. لا تفتح مقبض القفل والغلق بقوة في أثناء سكب المشروب. انتظر حتى يتوقف الاستخلاص. توقف الماكينة عملية الإعداد أوتوماتيكياً. يمكن إيقاف خروج المشروب في أي وقت يدوياً بالضغط على زر البدء/التوقف.



اشطف جانبي حامل الكبسولة معاً بمياه شرب عذبة. جفف حامل الكبسولات. ثم ادخله في الماكينة مرة أخرى. استمتع بمشروبك!



اسحب حامل الكبسولات. أخرج الكبسولة المستخدمة. ضع الكبسولة المستعملة في صندوق القمامة.

7.2 كبسولتان (على سبيل المثال CAPPUCINO)



تأكد من عدم وجود أداة الغسل داخل الماكينة. أدخل أول كبسولة في حامل الكبسولات. ثم أدخله في الماكينة مرة أخرى. أغلق مقبض القفل.




افتح مقبض القفل. الماكينة تعمل تلقائيًا. يومض زر اختيار درجة الحرارة، بينما تسخن الماكينة لمدة 40 ثانية تقريبًا. بعد ذلك، يومض زر اختيار درجة الحرارة وميضًا أحمر بانتظام. الماكينة جاهزة للاستعمال.




قم بضبط موضع درج التقطير. قم بوضع كوب بالحجم المناسب على درج التقطير. انظر «أمثلة على المشروبات» أو المغلف. تحقق من وجود مياه شرب نظيفة كافية في خزان المياه.



بعد الانتهاء من التحضير، يومض زر اختيار درجة الحرارة وتومض وحدة عرض المنسوب لمدة تصل إلى 8 ثوانٍ. لا تفتح مقبض القفل خلال هذه الفترة!

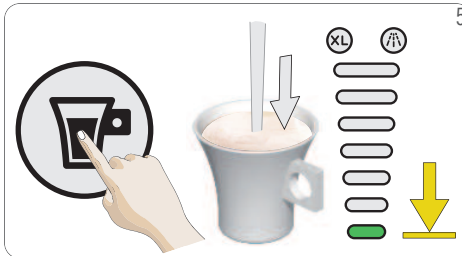

اضغط فوق زر البدء/التوقف. تبدأ عملية إعداد المشروب. لا تفتح مقبض القفل والغلق بقوة في أثناء سكب المشروب. انتظر حتى يتوقف الاستخلاص. توقف الماكينة عملية الإعداد أوتوماتيكيًا. يمكن إيقاف خروج المشروب في أي وقت يدويًا بالضغط على زر البدء/التوقف.

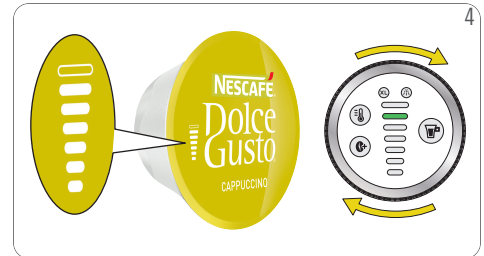

استخدم حلقة التحكم لاختيار المنسوب وفقًا لعدد الأشرطة الظاهرة على الكبسولة، أو اختر المنسوب المرغوب حسب ذوقك الخاص. اختر مشروب XL لكوب كبير جدًا. انتظر حوالي 1.5 دقيقة إذا أردت أن تُعد كوبًا كبيرًا جدًا آخرًا.



استخدم حلقة التحكم لاختيار المنسوب وفقًا لعدد الأشرطة الظاهرة على الكبسولة، أو اختر المنسوب المرغوب حسب ذوقك الخاص.



أدخل كبسولة أخرى في حامل الكبسولات. ثم أدخله في الماكينة مرة أخرى. أغلق مقبض القفل.



افتح مقبض القفل. اسحب حامل الكبسولات. أخرج الكبسولة المستخدمة. ضع الكبسولة المستعملة في صندوق القمامة.


7.1 كبسولة واحدة (على سبيل المثال LUNGO)



تأكد من عدم وجود أداة الغسل داخل الماكينة. أدخل أول كبسولة في حامل الكبسولات. ثم أدخله في الماكينة مرة أخرى. أغلق مقبض القفل.




افتح مقبض القفل. الماكينة تعمل تلقائياً. يومض زر اختيار درجة الحرارة، بينما تسخن الماكينة لمدة 40 ثانية تقريباً. بعد ذلك، يومض زر اختيار درجة الحرارة وميضاً أحمر بانتظام. الماكينة جاهزة للاستعمال.

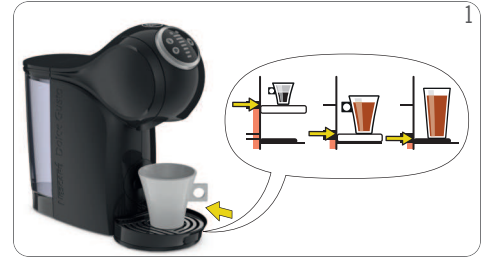

قم بضبط موضع درج التقطير. قم بوضع كوب بالحجم المناسب على درج التقطير. انظر «أمثلة على المشروبات» أو المغلف. تحقق من وجود مياه شرب نظيفة كافية في خزان المياه.



بعد الانتهاء من التحضير، يومض زر اختيار درجة الحرارة وتومض وحدة عرض المنسوب لمدة تصل إلى 8 ثوان. لا تفتح مقبض القفل خلال هذه الفترة!

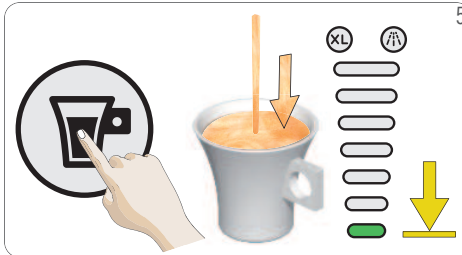

اضغط فوق زر البدء/التوقف. تبدأ عملية إعداد المشروب. لا تفتح مقبض القفل والغلق بقوة في أثناء سكب المشروب. انتظر حتى يتوقف الاستخلاص. توقف الماكينة عملية الإعداد أوتوماتيكياً. يمكن إيقاف خروج المشروب في أي وقت يدوياً بالضغط على زر البدء/التوقف.



استخدم حلقة التحكم لاختيار المنسوب وفقاً لعدد الأشرطة الظاهرة على الكبسولة، أو اختر المنسوب المرغوب حسب ذوقك الخاص. اختر مشروب XL لكوب كبير جداً. انتظر حوالي 1.5 دقيقة إذا أردت أن تُعد كوباً كبيراً جداً آخرًا.



اشطف جانبي حامل الكبسولة معاً بمياه شرب عذبة. جفف حامل الكبسولات. ثم أدخله في الماكينة مرة أخرى. استمتع بمشروبك!



اسحب حامل الكبسولات. أخرج الكبسولة المستخدمة. ضع الكبسولة المستعملة في صندوق القمامة.



بعد خروج المشروب، افتح مقبض القفل. أزل الكوب من درج التقطير.




أغلق مقبض القفل.




افتح مقبض القفل. ضع أداة الغسل داخل حامل الكبسولات. ركب حامل الكبسولات بالماكينة. ضع وعاء فارغًا كبيرًا أسفل منفذ القهوة.




املا خزان المياه بمياه شرب نظيفة. ثم أدخله في الماكينة مرة أخرى. اسحب درج التطهير.

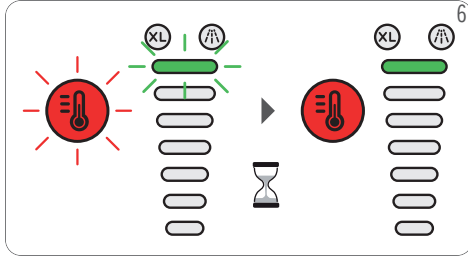

بعد الانتهاء من التحضير، يومض زر اختيار درجة الحرارة وتومض وحدة عرض المنسوب لمدة تصل إلى 8 ثوانٍ.

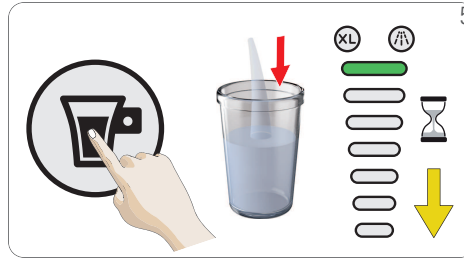

اضغط فوق زر البدء/التوقف. الماكينة تبدأ في الغسل.

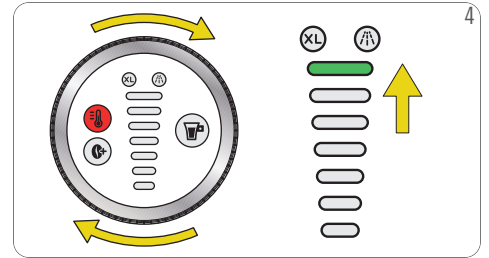


استخدم حلقة التحكم، واختر المستوى 7 على وحدة عرض المنسوب (أعلى شريط).



أفرغ الوعاء. املا خزان المياه بمياه شرب نظيفة. أعد تركيب خزان المياه بالماكينة. أعد إدخال درج التطهير. الماكينة جاهزة للاستعمال.



افتح مقبض القفل. اسحب حامل الكبسولات. أزل أداة الغسل. أعد إدخال حامل الكبسولات.

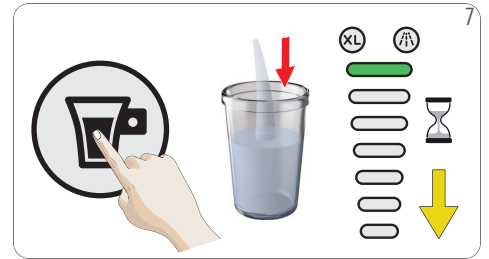


اضغط فوق زر البدء/التوقف. الماكينة تبدأ في الغسل. انتظر حتى تتوقف الماكينة تلقائيًا. بعد الانتهاء من التحضير، يومض زر اختيار درجة الحرارة وتومض وحدة عرض المنسوب لمدة تصل إلى 8 ثوانٍ.


5. توصيات للاستخدام الآمن




بعد الانتهاء من التحضير، يومض زر اختيار درجة الحرارة وتومض وحدة عرض المنسوب لمدة تصل إلى 8 ثوان. لا تفتح مقبض القفل خلال هذه الفترة! بعد ذلك، يومض زر اختيار درجة الحرارة بانتظام.

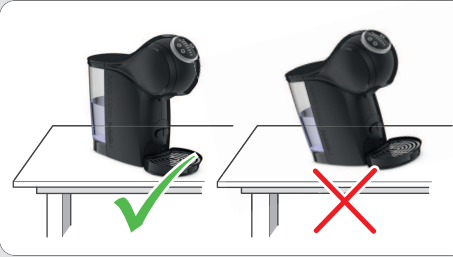


ضع الماكينة دائماً بشكل عمودي مستقيم!

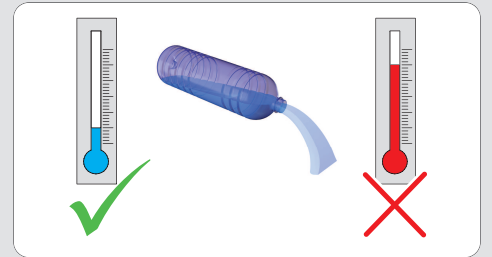


لا تضيف أبداً الماء الساخن في خزان المياه! استخدم مياه الشرب فقط لشطف الماكينة وإعداد المشروب.

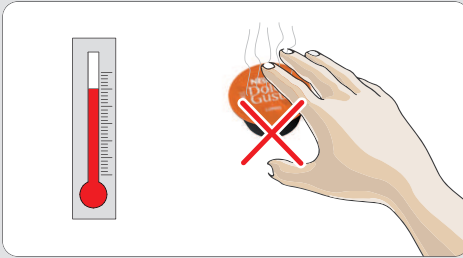


لا تلمس الكبسولة المستخدمة بعد إعداد المشروب! سطح ساخن، خطر الاحتراق!

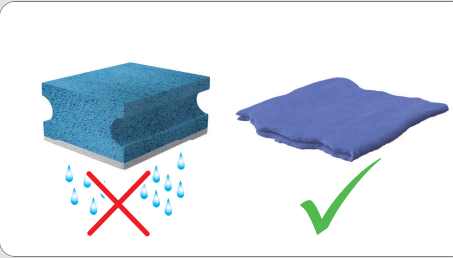

لا تستخدم إسفنجة مبتلة جداً. استخدم فقط قطعة قماش ناعمة رطبة لتنظيف الجزء العلوي من الماكينة.

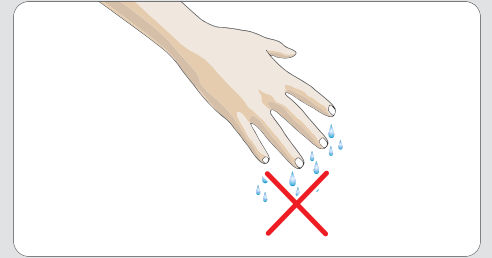

لا تلمس القابض أبداً ويداك مبللتين. لا تلمس الماكينة أبداً ويداك مبللتين.

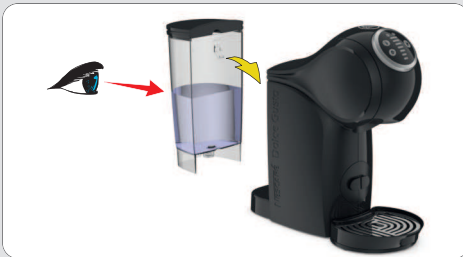

إذا لم تُستخدم لأكثر من يومين، أفرغ خزان المياه واشطفه وأعد تعبئته بمياه شرب نقية وركبه في ماكينة إعداد القهوة. قبل إعادة استخدام جهاز الشطف وفقاً للتعليمات الواردة 8. «التنظيف» الواردة في الصفحة 17 بدءاً من الخطوة 4 إلى الخطوة 8.




لا تستخدم أداة الغسل لإعداد الشاي أو الماء الساخن.




لا تلمس الحاقن بالإصبع!

اختر ساخن أو بارد

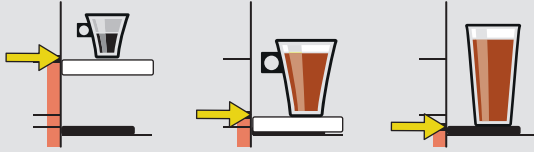



عدّل درج التقطير

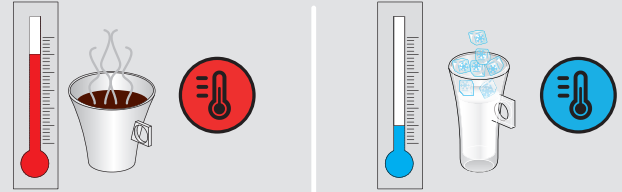

الكابتشينو المثلج




① + ②

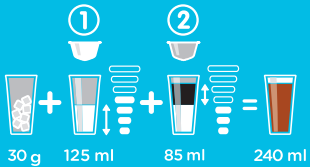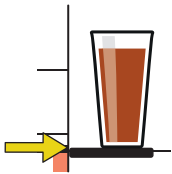


كابوتشينو




① + ②

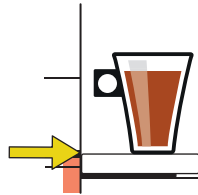

قهوة جراند/أمريكانو
الكوب الصباحي

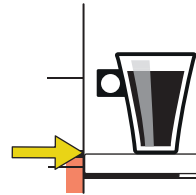


اسبريسو

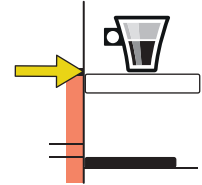


3. الميزات الأساسية

3.5 الوضع البارد

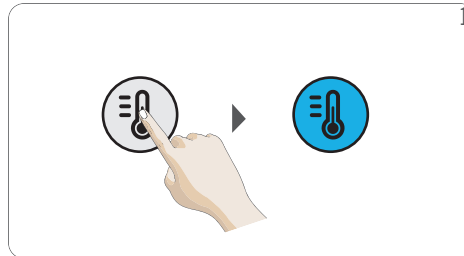


⚠ يجب عدم استخدام الوضع البارد إلا مع المنتجات الباردة المحددة، مثل كابوتشينو آيس. **الخيار A: الماكينة مطفأة.**


اضغط زر اختيار درجة الحرارة لبدء تشغيل الوضع البارد في ماكينة إعداد القهوة. يمكن إعداد المشروبات الباردة على الفور.

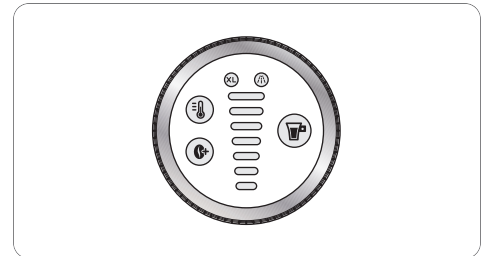


افتح مقبض القفل. الماكينة تعمل تلقائيًا. انقر فوق زر اختيار درجة الحرارة في غضون 10 ثوان بعد تشغيل ماكينة إعداد القهوة للانتقال إلى الوضع البارد (أزرق). يمكن إعداد المشروبات الباردة على الفور.

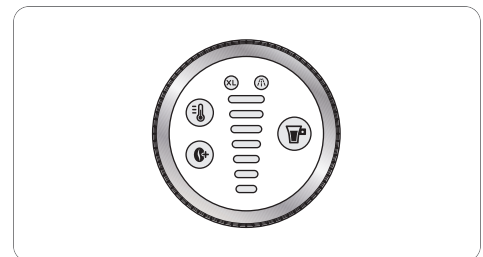


الخيار B: الماكينة مطفأة.

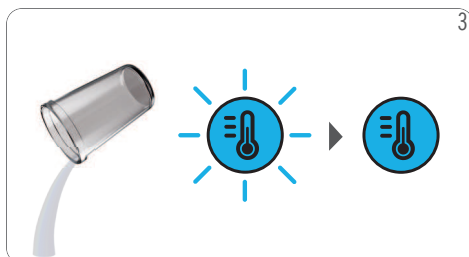

أفرغ الكوب. يومض زر اختيار درجة الحرارة وميضًا أزرق بانتظام للإشارة إلى أن ماكينة إعداد القهوة في وضع التبريد ومن ثم يمكن إعداد مشروب بارد.

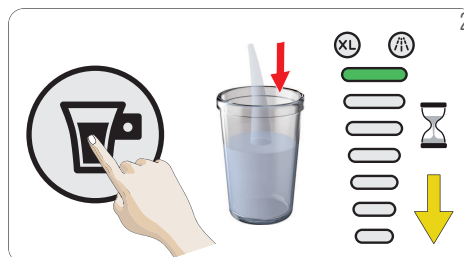

لتسريع عملية التبريد، اختر المستوى 7 على وحدة عرض المنسوب. اضغط فوق زر البدء/التوقف. الماكينة تبدأ في الغسل. تنتقل وحدة عرض المنسوب الشرائطية للأسفل حتى يختفي.

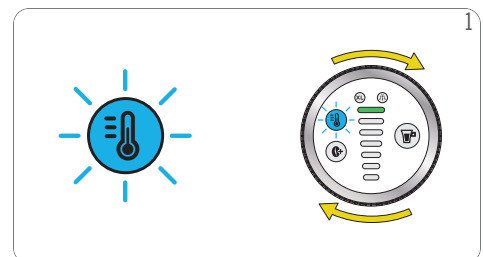

الخيار C: تم إعداد مشروب ساخن أو لم يتم اختيار الوضع البارد في غضون 10 ثوان من تشغيل الماكينة. اضغط فوق زر اختيار درجة الحرارة للانتقال إلى الوضع البارد. سيومض زر اختيار درجة الحرارة وميضًا أزرق للإشارة إلى أن ماكينة إعداد القهوة بحاجة إلى التبريد.

3. الميزات الأساسية


3.4 اختيار درجة الحرارة



حدد درجة حرارة قهوتك حسب ذوقك الشخصي. تزودك ماكينة إعداد القهوة بأربع إعدادات مسبقة الضبط وهي المستوى البارد والمنخفض والمتوسط والمزيج.



استخدم حلقة التحكم لاختيار المنسوب وفقاً لعدد الأشرطة الظاهرة على الكبسولة، أو اختر المنسوب المرغوب حسب ذوقك الخاص.

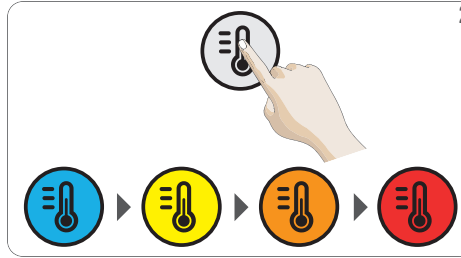

اضغط على زر درجة الحرارة لاختيار درجة الحرارة المرغوبة لمشروبك.



تحقق من عدد الشرائط الموضح على الكبسولة.



استمتع بمشروبك!



بعد الانتهاء من التحضير، يومض زر اختيار درجة الحرارة وتومض وحدة عرض المنسوب لمدة تصل إلى 8 ثوان. لا تفتح مقبض القفل خلال هذه الفترة!



اضغط فوق زر البدء/التوقف. تبدأ عملية إعداد المشروب. لا تفتح مقبض الفتحة والغلق بقوة في أثناء سكب المشروب. انتظر حتى يتوقف الاستخلاص. توقف الماكينة عملية الإعداد أوتوماتيكياً. يمكن إيقاف خروج المشروب في أي وقت يدوياً بالضغط على زر البدء/التوقف.

3. الميزات الأساسية ESPRESSO BOOST 3.3



ESPRESSO BOOST




بإمكانك تحسين مذاق قهوة الإيسبرسو التي تعدّها

لا يمكن اختيار ESPRESSO BOOST في الوضع البارد. لا تستخدم وضع ESPRESSO BOOST مع كبسولات الحليب والشوكولاتة والشاي.



استخدم حلقة التحكم لضبط المنسوب وفقاً لعدد الأشرطة الظاهرة على الكبسولة، أو اختر المنسوب المرغوب حسب ذؤك الخاص (المستوى الأقصى 3).

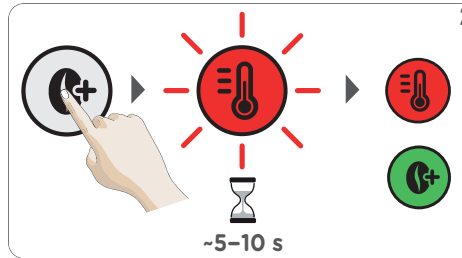

اضغط زر ESPRESSO BOOST للانتقال إلى وضع ESPRESSO BOOST. يومض زر اختيار درجة الحرارة، بينما تسخن الماكينة لمدة 5-10 ثانية تقريباً. بعد ذلك، يومض زر اختيار درجة الحرارة وميضاً أحمر بانتظام. الماكينة جاهزة للاستعمال.




تحقق من عدد الشرائط الموضح على الكبسولة. انقر ESPRESSO BOOST للكبسولات المحددة ضمن المستوى 1 و2 و3 فقط



ESPRESSO BOOST

استمتع بمشروبك!

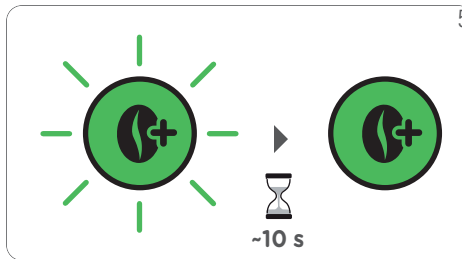

التبيل المسبق: تتوقف عملية التحضير مؤقتاً ثم يبدأ زر ESPRESSO BOOST في الوميض. بعد مضي 10 ثوان تقريباً، تستمر عملية التحضير ثم يومض زر ESPRESSO BOOST وميضاً أخضر بانتظام. انتظر حتى تتوقف الماكينة تلقائياً. يمكن إيقاف خروج المشروب في أي وقت يدوياً بالضغط على زر البدء/التوقف.



اضغط فوق زر البدء/التوقف. تبدأ عملية إعداد المشروب. لا تفتح مقبض الفتح والغلق بقوة في أثناء سكب المشروب.

3. الميزات الأساسية


3.1 حلقة التحكم LED سهلة الاستخدام

1. حلقة التحكم
 2. اختيار المنسوب لإعداد المشروب
 3. مؤشر إزالة الترسبات
 4. تحتاج ماكينة إعداد القهوة إلى إزالة الترسبات بعد سكب 300 كوب خاصة XL
 5. تحضير كوب كبير إضافي
 6. اختيار درجة الحرارة
 7. يمكن ضبط درجة حرارة المشروب (4 إعدادات مضبوطة مسبقًا):
- مرفعة

متوسطة

منخفضة


باردة
-
5. بارد، ولكن درجة حرارة المياه مرتفعة للغاية
 6. زر البدء/التوقف
 7. بدء/توقف
 8. ESPRESSO BOOST
 9. بإمكانك تحسين مذاق قهوة الإسبرسو التي تعدّها وحدة عرض المنسوب
 10. يوضح تقدم خروج الشراب من خلال التحرك للأسفل من المنسوب المحدد حتى الانتهاء

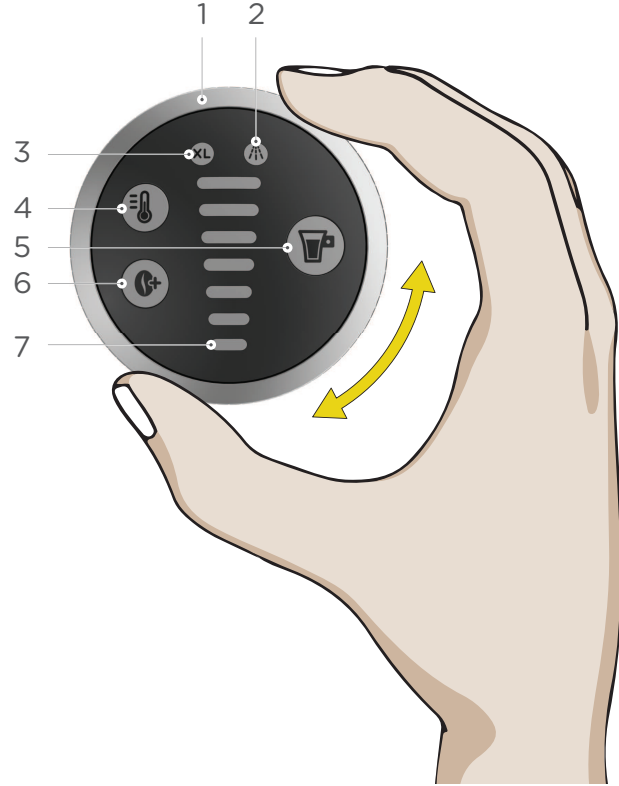


3.2 كيفية بدء تشغيل ماكينة إعداد القهوة



يمكن أيضاً تشغيل ماكينة إعداد القهوة عن طريق فتح مقبض القفل.

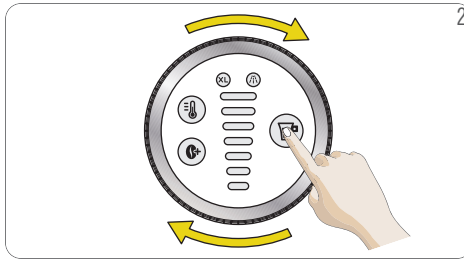

اضغط فوق أي زر أو أدر حلقة التحكم لتشغيل ماكينة إعداد القهوة.

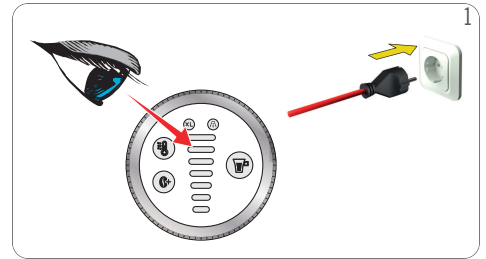

تأكد من استخدام الجهد السليم للفلوط كما هو مبين في «نظرة عامة على الماكينة» الواردة في الصفحة 6. قم بتوصيل قابس الكهرباء بمقبس التيار الكهربائي.

2. نظرة عامة على الماكينة

1. خزان الماء
2. غطاء خزان الماء
3. حلقة التحكم LED
4. مقبض القفل
5. أداة الغسل
6. حامل الكبسولات
7. إبرة التنظيف
8. حاقن
9. درج التقطير

الوضع الاقتصادي:

بعد دقيقة من عدم الاستخدام عند السكب.
5 دقائق عند التشغيل في حالة عدم السكب.
يرجى العلم بأن الجهاز يظل يستهلك الكهرباء، في الوضع الاقتصادي (0.45 واط/الساعة).

بيانات فنية

AE
W 1600-1340 ,Hz 60/50 ,V 240-220

كحد أقصى 15 باراً

0.8 لتر

2~ كغ

5 إلى 45 درجة مئوية

A = 11.21 سم
B = 27.32 سم
C = 28.65 سم



- ونظفهما يوميًا. يجب على الأشخاص الذين يعانون من الحساسية الغذائية 40. للحصول على إرشادات إضافية حول كيفية استخدام الجهاز، ارجع إلى دليل المستخدم على www.dolcegusto-me.com أو اتصل بالخط المباشر التابع لجهاز NESCAFÉ® Dolce Gusto®.
28. قد يظل سطح التسخين ساخنًا بعد الاستخدام وقد يظل ملمس الهيكل الخارجي البلاستيكي دافئًا لعدة دقائق بعد الاستخدام.
29. بالنسبة للمرضى ذوي جهاز تنظيم ضربات القلب أو جهاز إزالة الرجفان: لا يجب وضع حامل الكبسولات فوق جهاز تنظيم ضربات القلب أو جهاز إزالة الرجفان مباشرة.
30. يحظر وضع الماكينة في خزانة عند الاستخدام.

الأطفال

31. ابق الجهاز وسلكه الكهربائي بعيدًا عن متناول الأطفال دون 8 سنوات. لا يُسمح للأطفال بالعبث بالجهاز.
32. يمكن للأطفال من سن 8 سنوات وأكبر والأفراد من ذوي الاحتياجات الخاصة سواء من الناحية الجسدية أو الحسية أو العقلية أو الذين تتقصهم الخبرة أو المعرفة استخدام الجهاز، فقط في حالة وجود إشراف وثيق أو تلقيهم تعليمات الأمان الخاصة باستخدام الجهاز مع استبعادهم للمخاطر المتعلقة.
33. هذا الجهاز غير مخصص لاستخدام الأطفال أو الأشخاص الذين يعانون من قصور في القدرات البدنية أو الحسية أو العقلية أو الذين تتقصهم الخبرة والمعرفة ما لم يتم الإشراف عليهم أو إعطاؤهم تعليمات بخصوص استخدام الجهاز من قبل شخص مسؤول عن سلامتهم. وبالنسبة للأشخاص الذين لديهم قدرة محدودة على معرفة تشغيل هذا الجهاز واستخدامه أو لا يعرفون كيفية تشغيله واستخدامه، فيجب عليهم أولاً قراءة محتويات دليل المستخدم وفهمها بالكامل وطلب أي إرشادات إضافية خاصة بتشغيل الجهاز واستخدامه من الشخص المسؤول عن سلامتهم كلما أمكن.
34. يجب مراقبة الأطفال لضمان عدم عبثهم بالماكينة.
35. يجب ألا يقوم الأطفال بإجراء أعمال التنظيف أو الصيانة ما لم يتعدى عمرهم 8 سنوات وتحت إشراف شخص بالغ.
36. يحظر استخدام الأطفال للماكينة كلعبة.

الصيانة

37. انزع قابس الجهاز من مأخذ التيار الكهربائي الرئيسي قبل التنظيف. اترك الجهاز يبرد قبل تركيب أو فك أي أجزاء وقبل تنظيف الجهاز. لا تنظف أبدًا الجهاز تنظيفًا رطبًا ولا تغمره في أي سائل. لا تنظف أبدًا الجهاز بالمياه الجارية. لا تستخدم المنظفات أبدًا لتنظيف الجهاز. لا تستخدم سوى الإسفنج/ الفرش الناعمة لتنظيف الجهاز. يجب تنظيف خزان المياه باستخدام فرشاة طعام نظيفة وآمنة.
38. يجب أن تجرى أي أعمال تشغيل أو تنظيف أو عناية بالجهاز، فيما عدا الاستخدام العادي، لدى مراكز خدمة ما بعد البيع التي يتم تعيينها من خلال خدمة الخط المباشر من NESCAFÉ® Dolce Gusto®. لا تفك الجهاز أو تضع أي شيء في فتحاته.
39. لتقليل خطر حدوث حريق أو صدمة كهربائية، لا تزل الغطاء. لا توجد أجزاء بداخل الجهاز نافعة للمستخدم. يجب ألا يتم إجراء أعمال الإصلاح إلا من قبل موظفي خدمة معتمدين!

إعادة التدوير

41. العبوة مصنوعة من مواد قابلة لإعادة التدوير. اتصل بالمجلس المحلي الذي تتبعه أو الجهة المختصة للحصول على مزيد من المعلومات حول برامج إعادة التدوير. جهازك يتكون من مواد قيمة يمكن إعادة الانتفاع بها أو إعادة تدويرها.

الأسواق الأوروبية فقط: فُكر في البيئة!

- جهاز يتكون من مواد قيمة يمكن إعادة الانتفاع بها أو إعادة تدويرها. 
- اتركها في نقطة تجميع النفايات المحلية التابعة للمدينة أو في مركز الخدمة المعتمد حيث يتم التخلص منها بصفتها ممتلكات. ينص توجيه الاتحاد الأوروبي الصادر بشأن نفايات المعدات الكهربائية والإلكترونية (WEEE)، على أن الأجهزة المنزلية المستخدمة يجب ألا يتم التخلص منها بصفتها نفايات محلية عادية غير مصنفة. يجب أن يتم تجميع الأجهزة القديمة بشكل منفصل لتحسين فرز وإعادة تدوير أجزائها والحد من التأثير على صحة الإنسان والبيئة.

اقرأ جميع التعليمات واتبع تعليمات السلامة هذه. قد يؤدي أي نوع من سوء استخدام الجهاز إلى احتمال التعرض للإصابة.

لا تتحمل الشركة المنتجة أي مسؤولية في حالة سوء استخدام الجهاز أو عدم الالتزام بالتعليمات الواردة، وتسقط حقوق الضمان.

لا يغطي الضمان الأجهزة التي لا تعمل أو لا تعمل بشكل سليم جراء عدم الاعتناء بها وعدم إزالة الترسبات منها أو كلاهما.

الاستخدام المقصود

1. هذا الجهاز مخصص للاستخدام في الأغراض المنزلية فقط وهو غير مخصص للاستخدام في الأماكن والأغراض التالية، ومن ثم لن يكون الضمان ساريًا في تلك الحالات:

- مناطق المطبخ الخاصة بالموظفين في المحلات التجارية والمكاتب وبيئات العمل الأخرى؛
- البيوت الزراعية؛
- من قبل العملاء في الفنادق والموتيلات وغيرها من أماكن الإقامة؛
- أماكن المبيت والإفطار؛

2. هذا الجهاز مخصص للاستخدام داخل المنزل فقط على ارتفاع يقل عن 3400 متر.

إمداد الطاقة الكهربائية

3. قم بتوصيل الجهاز بمأخذ التيار الرئيسي من خلال وصلة أرضية فقط. يجب أن يكون جهد مأخذ الكهرباء مطابقًا للتفاصيل الموضحة على لوحة التصنيف. يؤدي استعمال وصلة غير سليمة إلى إبطال الضمان، وقد ينطوي هذا الاستعمال على مخاطر.

4. لحماية الأشخاص من التعرض لحريق أو لصدمة كهربائية أو لأي إصابة، لا تغمر سلك الكهرباء أو القوابس أو الجهاز في الماء أو في غيره من السوائل. تجنب انسكاب السوائل على القابس. لا تلمس سلك الكهرباء ويداك مبللتين. لا تملأ خزان الماء بشكل زائد عن الحد. في حالة الطوارئ، اسحب القابس من مقبس الكهرباء الرئيسي على الفور.

6. انزع قابس الجهاز من مقبس مأخذ التيار الكهربائي الرئيسي في حالة عدم استخدام الجهاز.

7. أفصل الجهاز عن التيار الكهربائي، انزع القابس من مأخذ التيار الرئيسي. ولا تفصل التيار الكهربائي عن طريق شد أو جذب السلك. لا تجعل سلك الكهرباء معلقًا فوق حافة منصدة أو طاولة ولا تجعله يلمس أي أسطح ساخنة أو حواف حادة. لا تجعل سلك الكهرباء متدليًا (خطر التعثر). لا تلمس سلك الكهرباء أبدًا ويداك مبللتين.

9. لا تشغل الجهاز في حالة تلف سلك الكهرباء أو القابس. إذا كان سلك الكهرباء تالفًا، يجب تغييره لدى الشركة المنتجة أو وكيل خدمتها أو لدى أي أشخاص مؤهلين لهذا الغرض لتجنب التعرض لأي مخاطر. لا تشغل أي جهاز به خلل وظيفي أو متعرض لأي شكل من أشكال التلف. أفصل سلك الكهرباء عن التيار الكهربائي على الفور. أعد الجهاز التالف إلى أقرب مركز خدمة معتمد يتم تعيينه من خلال خدمة الخط المباشر من NESCAFÉ® Dolce Gusto.

10. في حالة عدم مطابقة مقبس الطاقة الرئيسي للقابس الخاص بالجهاز، استبدل القابس بنوع مناسب من مراكز خدمة ما بعد البيع التي يتم تعيينها

شروط الاستخدام

11. احرص دائمًا على استخدام الجهاز على أسطح مستوية وثابتة ومقاومة للحرارة بعيدًا عن مصادر الحرارة أو رذاذ الماء.
12. لا تستخدم الجهاز بدون درج التقطير وشبكة التقطير، إلا في حالة استخدام كوب طويل جدًا. لا تستخدم الجهاز لإعداد الماء الساخن.
13. لا تقبل أبدًا الماكينة رأسًا على عقب.
14. قد يؤدي استخدام ملحقات تكميلية غير مصرح بها من قبل الشركة المنتجة للجهاز إلى تعرض الأشخاص لحريق أو صدمة كهربائية أو إصابة.
15. لا تضع الجهاز على أو بالقرب من موقد غاز ساخن أو موقد كهربائي أو في فرن ساخن.
16. لا تضع أصابعك أسفل المنفذ خلال إعداد المشروب.
17. لا تلمس الحاقن الموجود في رأس الماكينة.
18. لا تحمل الجهاز أبدًا من رأس وحدة الاستخلاص.
19. حامل الكبسولات مزود بمغناطيس ثابت. تجنب وضع حامل الكبسولات بالقرب من الأجهزة والأغراض التي يمكن أن تتضرر من العناصر المغناطيسية، مثل بطاقات الائتمان، وغيرها من محركات التخزين USB وغيرها من محركات البيانات، علاوة على أجهزة الفيديو والتلفزيون وشاشات الكمبيوتر المزودة بأنابيب صور، والساعات الميكانيكية، وساعات الأذن ومكبرات الصوت.
20. لا توقف تشغيل الجهاز أثناء عملية إزالة الترسبات. اغسل خزان المياه ونظف الجهاز لضمان عدم وجود أي من المنظفات المزيلة للترسبات.
21. في حالة التخطيط للسفر لفترة طويلة لقضاء عطلة على سبيل المثال وما إلى ذلك، يجب تفريغ الجهاز وتنظيفه وفصله عن الكهرباء. يجب غسل الجهاز قبل إعادة استخدامه. شغل دورة الغسل قبل إعادة استخدام جهازك.
22. ننصح باستخدام كبسولات NESCAFÉ® Dolce Gusto المصممة و المختبرة خصيصًا للجهاز لضمان جودة القهوة المتعارف عليها، فكل كبسولة مصممة لإعداد كوب مثالي و لايمكن إعادة استخدامها.
23. لا تقم بإزالة الكبسولة الساخنة باليد. استخدم دائمًا حامل الكبسولات للتخلص من الكبسولة المستخدمة.
24. احرص دائمًا على تركيب حامل الكبسولات بالجهاز لإعداد أي مشروب. لا تسحب حامل الكبسولات للخارج قبل أن يتوقف المؤشر عن الوميض. لن يعمل الجهاز إذا لم يكن حامل الكبسولات مركبًا به.
25. الماكينات المجهزة بمقبض مقفل: قد تحدث الإصابة بالحروق إذا كان مقبض القفل مفتوحًا في أثناء دورات التخمير. لا تسحب مقبض القفل للأعلى قبل أن تتوقف أضواء الجهاز عن الوميض.
26. لأسباب صحية، احرص دائمًا على ملء خزان المياه بمياه شرب عذبة.
27. بعد استخدام الجهاز، احرص دائمًا على إزالة الكبسولة وتنظيف حامل الكبسولات. أفرغ كل من لوح التقطير ووعاء الكبسولات

- 10.2 في حالة عدم خروج أي سوائل - هل لا توجد مياه؟ 20
- 10.3 في حالة عدم خروج أي سوائل - هل يوجد انسداد في الكبسولة؟ 21
- 10.4 في حالة عدم خروج أي سوائل - هل يوجد انسداد في الحاقن؟ 21
- 10.5 متنوع 22

1.	احتياطات السلامة	4
2.	نظرة عامة على الماكينة	6
3.	الميزات الأساسية	7
3.1	حلقة التحكم LED سهلة الاستخدام	7
3.2	كيفية بدء تشغيل ماكينة إعداد القهوة	7
3.3	ESPRESSO BOOST	8
3.4	اختيار درجة الحرارة	9
3.5	الوضع البارد	10
4.	أمثلة على المشروبات	11
5.	توصيات للاستخدام الآمن	12
6.	الشطف عند الاستخدام لأول مرة	13
7.	إعداد مشروب	14
7.1	كبسولة واحدة (على سبيل المثال LUNGO)	14
7.2	كبسولتان (على سبيل المثال CAPPUCCINO)	15
8.	التنظيف	17
9.	إزالة الترسبات كل 3-4 أشهر على الأقل	18
10.	استكشاف الأخطاء وإصلاحها	20
10.1	تعمل إضاءة المؤشر البرتقالية لإزالة الترسبات	20



GENIO ^S
PLUS

دليل المستخدم

